



SEI
INDUSTRIES



Bambi
BUCKET®
Driven by Innovation

BAMBI MAX
(4453-7590 MODELS)
SERVICE
MANUAL
2013 VERSION A

**BAMBI MAX SERVICE MANUAL - Models 4453-7590
Version A**

Issue Date: October 2013

PLEASE READ BEFORE USING.

SEI INDUSTRIES LTD.

7400 Wilson Avenue
Delta, B.C. Canada
V4G 1E5

Phone: (604) 946-3131

Fax: (604) 940-9566

E-Mail: seisales@sei-ind.com

Website: www.sei-ind.com

COPYRIGHT © 2013 SEI INDUSTRIES LTD. ALL RIGHTS RESERVED
PRINTED IN CANADA



We Engineer Solutions

2013 Bambi MAX Service Manual – Models 4453-7590 (Version A)

Table of Contents

Section 1: Introduction	1
Bambi MAX (Models 4453–7590)	1
Valve System	2
System Overview	2
System Description	2
Section 2: Deploying the Bambi MAX	6
Deployment Instructions	6
Attaching to the Cargo Hook	6
Head Orientation	6
Connecting Power	7
Using Longlines	7
Instant Deployment System (IDS)	10
Section 3: Using Accessories	11
Using Foam	11
Sacksafoam Foam Injection System	11
Compatible Bambi MAX/Sacksafoam Models	12
Bambi Mobility Sled	13
Section 4: Making Adjustments	14
Adjusting Components	14
Valve Adjustment	14
Section 5: Packing and Storage	16
Packing and Storing	16
Packing the Bucket	16
Storing the Bambi MAX	20
Section 6: Troubleshooting and Maintenance	21
Troubleshooting	21
Valve Troubleshooting	21
Checking Aircraft / Longline Wiring	22
PowerFill Snorkel Troubleshooting	23
Maintenance Procedures	24
Weekly Inspections	24
Weekly Inspection Checklist	24
Pump Output Shaft Lubrication	25
Grease Procedure	25
Unscheduled Maintenance	26
Unscheduled PowerFill Maintenance Procedures	26

Section 7: Valve Maintenance	27
Bambi MAX Valve Replacement	27
<i>Valve Removal</i>	27
<i>Valve Installation</i>	29
<i>Bambi MAX Seal Replacement</i>	31
<i>Drive Cable Replacement</i>	36
<i>Changing the Guide Bushings</i>	40
Section 8: General Repairs	41
Repair Instructions	41
<i>Suspension Line Replacement</i>	41
<i>M-Strap Replacement</i>	42
<i>Removing Old M-Straps</i>	43
<i>Installing New M-Straps (Short)</i>	44
<i>Installing New M-Straps (Long)</i>	46
<i>Bottom Loop Repairs</i>	48
<i>Bucket Patching</i>	48
<i>IDS Hub/Spokes Replacement</i>	49
<i>IDS Detailed Drawing</i>	50
<i>Load Test on the Hook</i>	50
Bambi MAX Shell Repairs	51
<i>Repair Failures</i>	51
<i>Repairing in High Humidity</i>	52
<i>Making Temporary Repairs with Sealing Clamps</i>	53
Temporary Repairs Using Glue	55
<i>Applying the Glue</i>	55
<i>Gluing with Patches</i>	56
<i>Cutting the Patch</i>	57
<i>Applying the Patch</i>	57
Hot Air Gun Patching	59
<i>Hot Air Gun Procedure</i>	60
Repair Kits	61
<i>Repair Kit Parts Table</i>	61
<i>Optional Supplies</i>	61
Section 9: Specifications and Parts	62
Capacity and Weight Specifications	62
Parts Listings	63
<i>Bambi MAX Valve 25" Shell Assembly, Models 4453-5566</i>	63
<i>Bambi MAX Valve 25" Shell Assembly, Models 6578-7590</i>	64
<i>Bambi MAX Valve 25" Installation</i>	65
<i>Bambi MAX Valve 25" Seals</i>	66
<i>Bambi MAX Valve 25" Actuator and Controller</i>	67
<i>Bambi MAX Valve 25" Actuator</i>	68
<i>Bambi MAX Valve 25" Actuator 2</i>	69
<i>Bambi MAX Valve 25" Sheave Bar and Guide Rods</i>	70
<i>Bambi MAX Valve 25" Lift Bar and Linkage</i>	71

<i>Bambi MAX Valve 25" Lift Bar</i>	72
<i>Bambi MAX Head, Model 4453</i>	73
<i>Bambi MAX Head, Models 5566-7590</i>	73
<i>Bucket Shell, Models 4453</i>	74
<i>Bucket Shell, Models 5566</i>	75
<i>Bucket Shell, Models 6578-7590</i>	76
<i>Rigging, Models 4453 and 5566</i>	77
<i>Rigging, Models 6578 - 7590</i>	78
<i>IDS System, Model 4453</i>	79
<i>IDS System, Model 4453 (continued)</i>	80
<i>IDS System, Model 5566</i>	81
<i>IDS System, Model 5566 (continued)</i>	82
<i>IDS System, Models 6578 - 7590</i>	83
<i>IDS System, Models 6578 - 7590 (continued)</i>	84
<i>Ballast Systems, Models 4453 - 7590</i>	85
<i>Carry Bags</i>	86

Section 10: Warranty 87

Appendix: Drawings 88

<i>Pilot Controls</i>	88
<i>Pilot Controls, US Interagency</i>	89
<i>Crew Controls (using remote power supply)</i>	90

Section 1: Introduction

Bambi MAX (Models 4453–7590)

This manual provides helicopter operators with information on the service and maintenance of the Bambi MAX. This service manual also includes all parts lists and installation drawings. A separate Bambi MAX operations manual is also supplied which should be carried on-board the helicopter.

For your own protection, and for longer bucket life, always read the instructions and warnings. Ignoring these warnings could result in personal injury, bucket damage or aircraft damage.

SEI Industries Ltd. offers complete parts supply and repair services for the Bambi MAX. For a repair facility in your area, please contact SEI.

For maintenance and repair purposes, parts diagrams and descriptions are provided in this manual.

When ordering parts, please provide the model and serial number of your Bambi MAX.

There are several other models of buckets available from SEI Industries. These include Bambi MAX model series 1518-3542 and series HL4000-HL9800.




In addition, a number of accessories and enhancements are also available including the PowerFill system, Power Pack with hand grip (for valve only), Sacksafoam and Marine Recovery Device.

For more copies of this manual, please contact SEI or visit our website at www.bambibucket.com for more information on these products.

Valve System

System Overview


The Bambi MAX uses a tubular type valve with seals located on the top and bottom of the tube. When in the default closed position, the seals make contact with top plate and bottom ring of the valve assembly. When in the open position, the tube is raised allowing water to flow between the bottom of the tube and the base ring and then through the opening in the base ring.

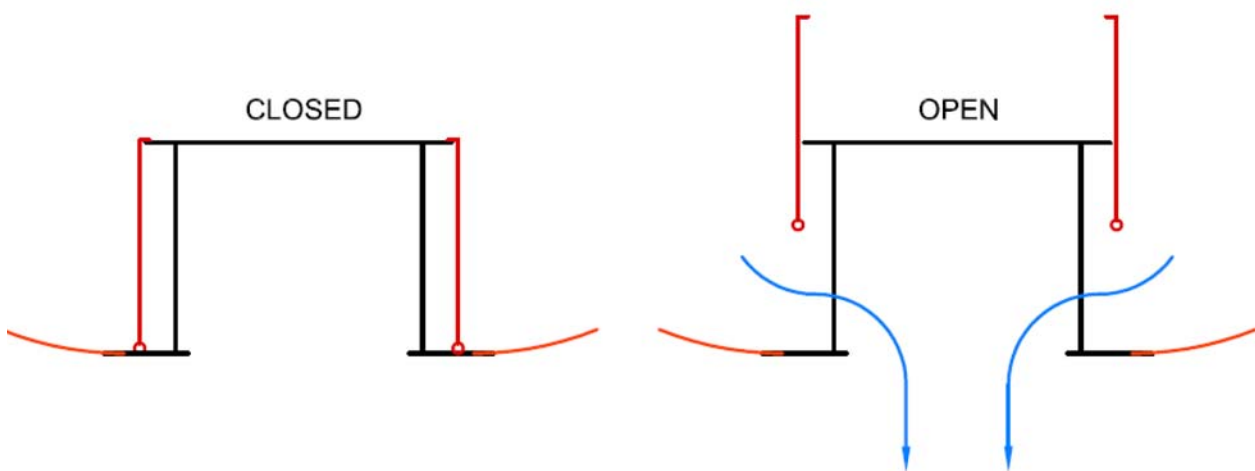

System Description


Movement of the valve tube is controlled by an actuator and drive cable system. The actuator is mounted on the top plate and consists of a drive motor, reduction gearing and a cable drum. The cable drum can be rotated clockwise or counter-clockwise depending on the direction of the motor.

One end of the drive cable is attached to the cable drum. The cable is routed down around the deflector sheaves at the base of the valve and back up to the cable drum where the other end is terminated forming a closed loop. The drive cable is also attached to a horizontal lift bar which itself is attached across the lower end of the tube.

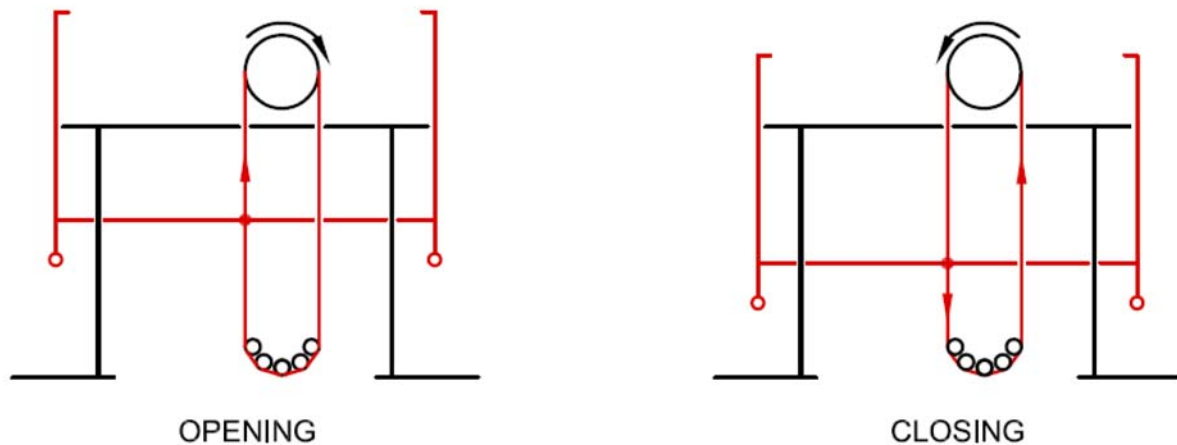

When the motor and cable drum is rotated clockwise, the drive cable pulls up on the lift bar, opening the valve. When the motor and cable drum is rotated counter-clockwise, the other end of the drive cable pulls down on the lift bar via the deflector sheaves, closing the valve. It is normal for there to be slackness on the non tension side of the cable.


Operation of the valve motor is regulated by a controller located in a waterproof enclosure on the top of the valve assembly. The controller receives power and a control signal from the aircraft via a three conductor cable. The control signal is provided in the aircraft via a momentary push button and relay.

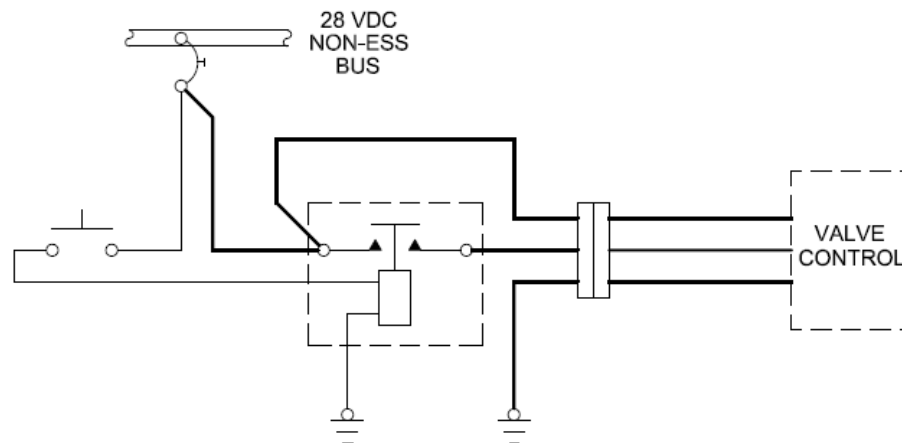

Caution

The control enclosure is hermetically sealed. Unauthorized opening will void the warranty.

Valve position feedback to the controller is provided by a sensor cam and two sensors. The sensor cam is located on the front of the cable drum and rotates with the motor and cable drum. The sensors are located in the controller enclosure. As the sensor cam rotates, a cut-out in its face actuates the sensors, signalling to the valve controller if the valve is closed, open, or somewhere in between. The sensors are a proximity type and are not affected by any non-metallic contamination of the water.

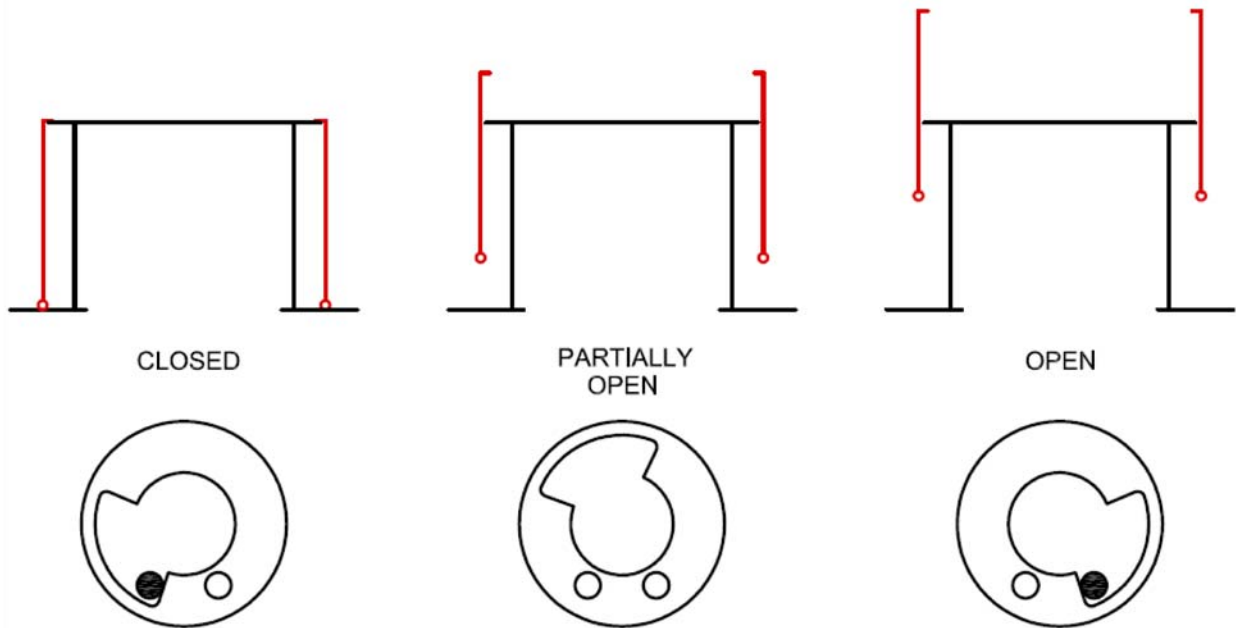

When the controller receives the open signal from the aircraft, the valve motor rotates clockwise and opens the valve. When the open sensor is triggered by the cam, the motor turns off and the valve remains in the open position as long as the open signal is present.

When the operator releases the push button, the open signal is removed. The motor rotates clockwise and closes the valve. When the closed sensor is triggered by the cam, the motor turns off and the tube remains in the closed position.

The sensor cam can be rotated on the drum to adjust the valve position. Rotating the cam clockwise will lower the valve; counter-clockwise will raise the valve. See *Section 4: Making Adjustments*.

There is a status indicator lamp on the side of the control enclosure which indicates where the controller thinks the valve is.

Indicator	Status
White (Off)	No Power
Yellow	Valve Closed
Flashing Green	Valve Partially Open
Green	Valve Open
Red	Sensor Fault

The controller has an internal motor protection system to prevent the motor from being overloaded. When excessive current flows to the motor due to a stalled condition, the motor protection device activates.

When activated, the device isolates the motor from the power source, but does not remove power from the rest of the controller. The controller and valve will remain locked in whatever state they were at the time the motor protection device was activated.

To reset the motor protection, turn off power to the circuit using the aircraft's circuit breaker. Wait for approximately 10 seconds and turn the power back on again. The valve should return to its normally closed state.

Section 2: Deploying the Bambi MAX

Deployment Instructions

Attaching to the Cargo Hook

Caution

The Bambi MAX may not be suitable for a direct hook-up to the cargo hook. The actual hook-up will be different for various aircraft and operators must comply with all instructions and bulletins supplied by the aircraft manufacturer. It is the operator's responsibility to ensure that the Bambi MAX is correctly fitted to the helicopter.

Head Orientation

The Bambi MAX is rigged for a longitudinal cargo hook. Correct attachment is indicated when the ballast on the Bambi faces forward in flight.

Caution

It is important that the ballast faces forward in flight. This will avoid twisting of the suspension lines and possible jamming of the tripline.

For this style of head, if using a swivel hook, always operate in the locked position to assure that the ballast is always facing forward in flight.



Connecting Power

The power requirement to control the Bambi MAX valve is 5 amps, 24/28 VDC. The Bambi MAX comes with a three-conductor, 16-gauge control cable that comes from the valve to 3' above the head. Attached to the end of the cable is a male waterproof Nema 5-15 electrical plug (the female receptacle for the helicopter is attached). If desired, the operator may replace these plugs to match the receptacles installed on their aircraft. If a longline is to be used, the replacement plug at the head should be waterproof.

The purpose of this type of plug is to offer a clean breakaway if the Bambi MAX has to be jettisoned from the aircraft in an emergency. It is suggested that the plug be lightly taped together with vinyl tape, while in use, to ensure that wind action does not separate the plug during flight.

There are three types of suggested wiring installations (see *Appendix* for diagrams).

1. **Pilot control:** In this configuration, the control is wired into the pilot's control column through a relay.
2. **Pilot control (US interagency):** In this configuration, the control is wired into the pilot's control column through a 50 amp relay as per US interagency regulations. This system can also be used to control a heli-torch, etc.
3. **Crew control (remote power supply):** This configuration allows a crew member or a pilot to control the dumping of the bucket using a battery pack to supply the power to the remote switch. This also eliminates the high cost of pre-wiring the aircraft.

Bambi MAX Model	Valve
	Current Draw Amps at 24.5 Volts
BBX4453	5
BBX5566	5
BBX6578	5
BBX7590	5

Using Longlines

Important Note

It is recommended that operators, who choose to use the Bambi MAX with a longline, ensure that the longline is at least 50' long.

Longlines should be at least 50 ft. long to keep the Bambi MAX well clear of the helicopter's tail rotor. When using a longline, care must be taken in selecting the correct gauge of control cable. See the chart below for recommendations.

When purchasing a synthetic rope longline, we recommend that the customer also purchase a protective cover and have the conduit inserted at the time of manufacture. However, if this is not feasible due to different conduits for different applications, we recommend taping the conduit using duct tape (grey) at 3-4 ft. intervals along the longline and cover.

We do not recommend using zip ties to attach wiring/conduit as this tends to damage the cover and longline. When attaching conduit, allowances must be made for any stretch in the load bearing line and this must be taken into account when attaching to ensure that the terminations are not released from the belly, bucket or hook, etc.

It is also imperative to take extreme care when removing the conduit from the longline, especially if a knife is used to remove the tape as one could inadvertently cut through the cover and the damage the synthetic rope. It is important to remember that when conduit is duct taped to the outside of a longline, the flight characteristics can change. In our experience, it may take some time and a few trial flights to determine the length between attachment points of the conduit to the longline.

Longline Wire Details


LENGTH	GAUGE	TYPE
50 FT.	# 16 GAUGE	16/3 SOW
75 FT.	# 16 GAUGE	16/3 SOW
100 FT.	# 16 GAUGE	16/3 SOW
125 FT.	# 14 GAUGE	14/3 SOW
150 FT.	# 14 GAUGE	14/3 SOW
200 FT.	# 12 GAUGE	12/3 SOW

Checking Suspension Cable Length

Warning

Using a Bambi MAX with a greater overall length than the distance from the cargo hook to the front tip of the tail rotor on your helicopter could result in a tail rotor strike and possible loss of control of the helicopter which could result in injury or death.

Measuring the bucket.

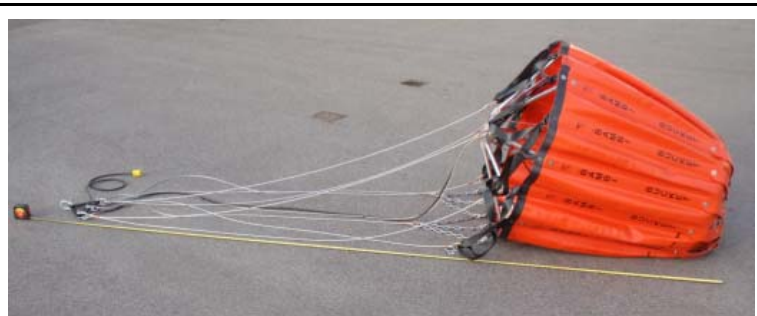

Overall lengths of Bambi MAXs with standard rigging are provided in this manual. Before using the Bambi MAX, check for the maximum total length. To determine this length, measure the distance from the cargo hook to the front tip of the tail rotor on the helicopter you will be using and subtract 6" (152 mm).

Bambi MAX Model	Overall Length	
	Feet	Meters
4453	21' 3"	6.47
5566	21' 5"	6.53
6578	21' 8"	6.60
7590	27' 9"	8.46

*Lengths are accurate to within 1%.
Overall lengths with standard rigging.
Specifications subject to change.*

To determine overall bucket length:

1. Stretch out the bucket on the ground; secure the control head.
2. Measure the distance from the shackle on the control head to the bottom of the bucket. This measurement should be less than the maximum total length of the dimension taken from the helicopter.

Important Note

To avoid potential rotor strikes when using the Bambi MAX, the operator must measure the extended length of the Bambi MAX and the distance from the belly hook to the closest possible point of the tail rotor.

A) Always measure the overall extended length of your Bambi MAX.

and


B) Measure the distance from the belly hook to the closest possible point on the tail rotor.

"B" must always exceed "A" by at least six (6) inches.


Instant Deployment System (IDS)

The instant deployment system uses a hub and spoke mechanism to automatically expand the mouth of the bucket as soon as the weight of the Bambi MAX is taken up by the suspension cables. When the bucket is full, the IDS deployment cable and hub restrainer cables should be slack as they should not bear any load. Their function is to position the hub and spoke mechanism to hold the bucket open.

The main parts of the IDS are illustrated in this manual for maintenance purposes. To deploy the IDS on the ground, reach into the bucket, grasp the hub of the IDS and pull outward fully until the two restraining cables from the hub to the lower bucket shell are tight. The IDS restraining cables are set at the factory and normally should not require any adjustment.

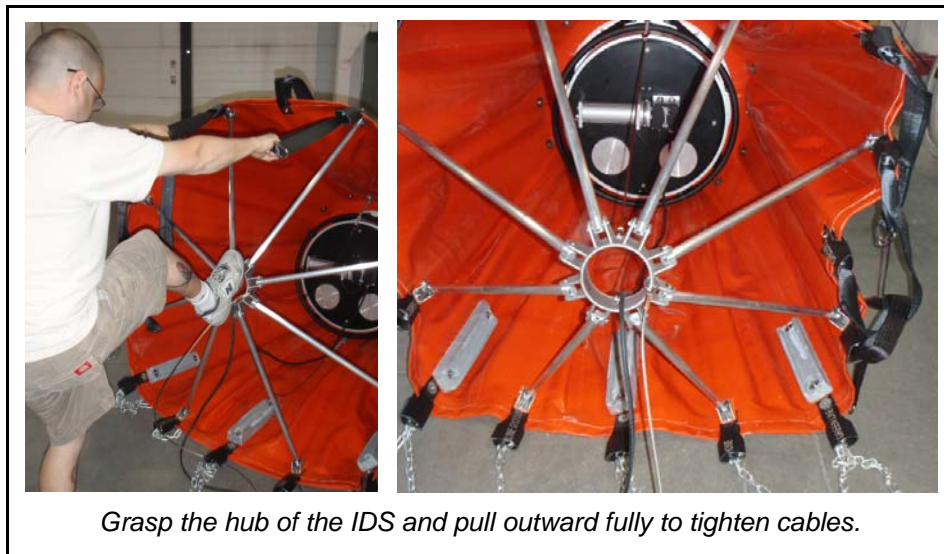

Grasp the hub of the IDS and pull outward fully to tighten cables.

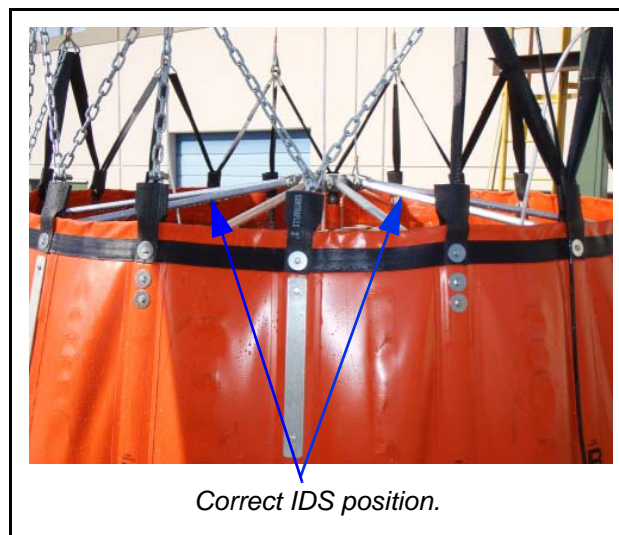

Correct IDS position.

Section 3: Using Accessories

Using Foam

The Bambi MAX is designed to be effective with foam. All materials used in the manufacture of the Bambi MAX are resistant to the chemical action of foam.

Caution

After using foam or retardants, cycle through several dumps with water only or hose down with fresh water. This will prolong the bucket life.

Sacksafoam Foam Injection System

The Sacksafoam is SEI Industries' advanced foam dispensing system for use with the Bambi MAX. This system, exclusive to the Bambi, allows foam to be dispensed into the bucket in route from the filling source to the fire site.

There are three models of Sacksafoam to fit this range of Bambi MAXs. The operation of the Sacksafoam is controlled by the pilot through a control unit, which is mounted in the cockpit. Sacksafoam I contains the foam reservoir directly installed inside the bucket.



Sacksafoam I

The Sacksafoam II is a self-contained unit that can be stowed onboard the helicopter. This system is completely housed in a foam-resistant case. With the Sacksafoam II, the pilot still controls the foam dispensing through the control unit.

The Sacksafoam III is identical to the Sacksafoam II, except that the controller is mounted in the foam resistant case in the Sacksafoam III.



*Sacksafoam II,
Model 5598*



Sacksafoam Plus

If additional foam storage is required, the Sacksafoam Plus can be purchased to add an additional 40 gallons of foam on board.

Compatible Bambi MAX/Sacksafoam Models

Model	Bambi Bucket	Reservoir USG	Capacity Liters
Sacksafoam I			
004339	BBX2024-BBX4453	30	114
004240	BBX5566-BBXHL5000	60	228
Sacksafoam II			
004344	BBX1518-BBX4453	25	95
Sacksafoam III			
004346	BBX5566-BBXHL9800	25	95
Sacksafoam Plus			
004350	Sacksafoam II & III	40	151

Bambi Mobility Sled

The Bambi Mobility Sled is a cart with wheels that moves larger buckets in hangars, on runways or around remote sites.



PART NUMBER	DESCRIPTION
009417	SKID, 5566-7590
009387	SKID, HL4000-HL9800

Section 4: Making Adjustments

Adjusting Components

Valve Adjustment

The valve tube has seals located on the top and bottom of the tube. The vertical position of the tube when in the closed position determines the amount of valve sealing. The valve is adjusted at the factory to its correct position and should not require field adjustment under normal conditions.


Following major valve maintenance such as seal replacement or drive cable replacement, the valve adjustment should be checked. If the valve is adjusted too high, it will leak. If the valve is adjusted too low, the motor protection circuit may be activated.

Determine the current state of valve adjustment as follows:

- Power up the bucket circuit to allow the valve to move to the closed position.
 - If the indicator lamp flashes green or the cable drum / sensor cam oscillates when the valve is closed, then the valve is adjusted too low.
- Actuate the bucket dump switch and hold to keep the valve in the open position.
 - If the indicator lamp flashes green or the cable drum / sensor cam oscillates when the valve is open, then the valve is adjusted too high.

The adjustment procedure is as follows:

- Power up the bucket circuit to allow the valve to close.
- Remove power from the bucket circuit.
- With the valve in the closed position, locate the two set screws on the perimeter of the sensor cam which lock the cam to the cable drum. They should be at approximately the 3 and 9 o'clock positions.

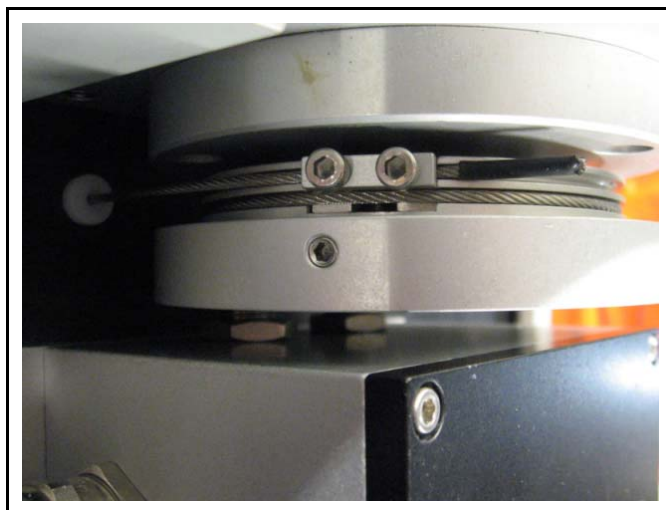

- Notice particularly the location of the 9 o'clock screw with respect to the cable anchor block. It is helpful to draw a reference line on the sensor cam to a reference point on the anchor block.
- Loosen the two set screws on the sensor cam using a 3/32 hex key.
- If the valve is too low, adjust the valve upwards by rotating the sensor cam counter-clockwise so that your reference line moves approximately 1/16." Tighten one setscrew.
- If the valve is too high, adjust the valve downwards by rotating the sensor cam clockwise so that your reference line moves approximately 1/16" (1 mm). Tighten one setscrew.
- After adjustment, power up the bucket circuit.
 - The valve should move to the closed position.
 - The indicator light should have a steady yellow color.
 - The cable drum / sensor cam should not oscillate.
- Actuate the bucket dump switch and hold
 - The valve should move to the open position.
 - The indicator light should have a steady green colour.
 - The cable drum / sensor cam should not oscillate.
- Release the dump switch to allow the valve to close.
- Re-adjust the valve as necessary until the correct open and close conditions are met.
- Tighten both setscrews.
- Note the position of the reference line or draw a new line at the correctly adjusted position.

Section 5: Packing and Storage

Packing and Storing

Packing the Bucket


1. Open the valve 1-2 inches.



Important Note

Always leave the valve open 1 to 2 inches as this prevents the bottom seal from collapsing during long periods of storage, leading to longer seal life.

2. Collapse the IDS by pushing the hub into the bucket.

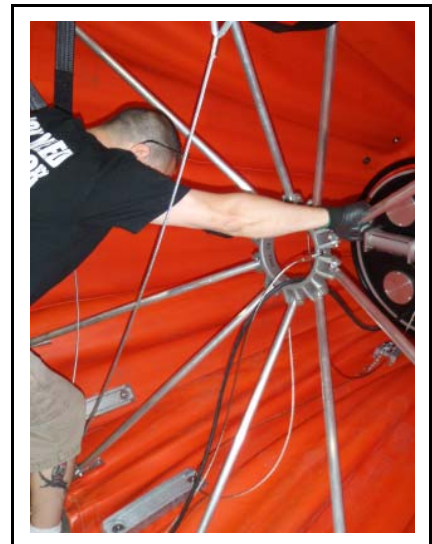

3. Grab the control head and pull the suspension lines taut. Tape the lines together in two bunches.




4. Insert the operations manual and control head into the storage bag.



5. Gather the suspension lines into a coil and stow inside the bucket. Place the control head outside of the bucket to prevent the possibility of the lines tangling.



6. Place the head on top of the collapsed bucket.

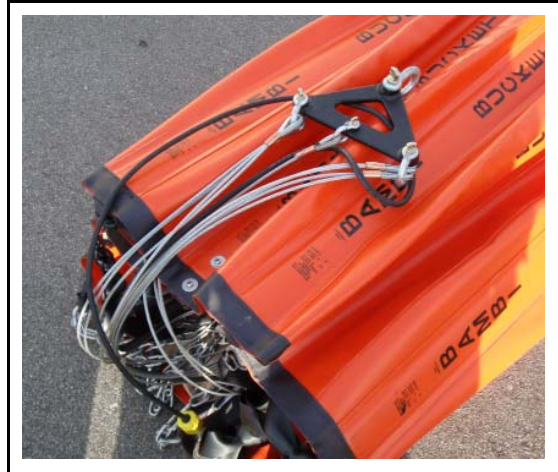

7. Roll the bucket into a bundle and wrap with straps supplied.



8. Rotate shell until head is under the shell.



9. Take the carrying bag and drape it over the bucket.



10. Roll the bucket over and insert the manual.



11. Close with zipper and store with label showing.



The Bambi MAX carrying bag makes a suitable shipping container when shipping via airfreight. Because of the compactness of the Bambi, many operators carry it aboard the helicopter, at all times, during the fire season. This allows for rapid deployment when required.

Storing the Bambi MAX

The following guidelines will help to ensure the longevity of your Bambi MAX:

1. Do not pile heavy objects on the Bambi MAX in storage. This may result in creases in the neoprene seal in the dump valve, which may cause leakage.
2. Wash the bucket and allow it to dry prior to storing it.
3. Do not store a wet bucket. This will result in the growth of mildew and the corrosion of aluminium and steel parts.
4. Store the bucket indoors in an unfolded position, preferably by suspending the main shackle from an overhead hook. An alternative is to suspend the bucket upside down from its bottom chain.
5. Before storing the bucket for an extended period, perform our recommended seasonal maintenance procedures.

Section 6: Troubleshooting and Maintenance


Troubleshooting

Valve Troubleshooting


Problem	Status Lamp	Possible Cause	Solution
No Power	Off (White)	Circuit breaker tripped	Reset circuit breaker.
		Aircraft / longline wiring	Check aircraft / longline wiring.
Circuit Breaker Trips	Off (White)	Aircraft / longline wiring	Check aircraft / longline wiring.
		Mechanical jamb	Clear jamb.
		Valve adjusted too high	Adjust valve down.
		Valve adjusted too low	Adjust valve up.
Valve Closed Won't Open	Flashing Green	Motor protector activated	Power cycle to reset. Adjust valve up.
	Yellow	No open signal	Check aircraft / longline wiring.
		Controller failure	Contact service center.
	Green	Damaged drive cable	Replace drive cable.
Red	Controller / sensor failure	Contact service center.	
Valve Open Won't Close	Flashing Green	Motor protector activated	Power cycle to reset. Adjust valve down.
	Green	Controller failure	Contact service center.
	Yellow	Damaged drive cable	Replace drive cable.
	Red	Controller / sensor failure	Contact service center.
Valve Leaks	Yellow	Damaged seals	Replace seals.
		Valve adjusted too high	Adjust valve down.

Checking Aircraft / Longline Wiring

- Set the multimeter to measure DC voltage.
- Install the black lead into the narrow socket of the helicopter wiring harness.
- Install the red lead into the round socket of the helicopter wiring harness.
 - The multimeter should read approx. +28V.
- Actuate the bucket dump switch.
 - The multimeter should still read +28V.

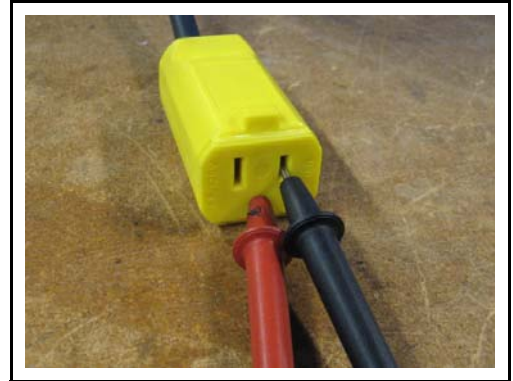

- Move the red lead to the wide socket of the helicopter wiring harness.
 - The multimeter should read 0V.
- Actuate the bucket dump switch.
 - The multimeter should now read +28V.

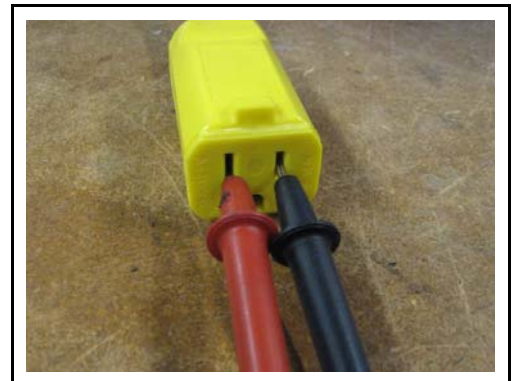

If a longline is being used, re-connect the longline into the aircraft wiring harness and repeat the above procedure for the receptacle on the bottom of the longline.

PowerFill Snorkel Troubleshooting

Problem	Possible Cause	Solution
Pump Won't Run	Circuit breaker tripped.	Reset circuit breaker.
	Disconnected cable.	Check cable connections.
	Incompatible power supply.	Compare power supply output with pump requirements.
Circuit Breaker Trips	Debris jamming pump.	Remove debris.
	Damaged motor.	Replace motor.
No Water Flow	Motor running backwards.	Check cable connections.
Pump Noisy	Pump impeller worn or damaged.	Repair / replace pump impeller.
	Debris in impeller housing.	Remove debris.
Fill Times Excessive	Debris filter clogged.	Clean debris filter.
	Pump impeller worn or damaged.	Repair / replace pump impeller.
	Excessive voltage drop in longline.	Use larger gauge cables.
	Damage to cables.	Repair / replace cables.

Maintenance Procedures

Weekly Inspections

In addition to the daily pre-flight inspections as outlined in the operations manual, follow the weekly inspection procedure for times when the bucket is in continuous use.

Caution

The lubrication of the pumps output shaft seals is critical to the longevity of the pump. Failure to follow the recommended lubrication intervals may result in premature pump failure. See this section's instructions on pump output shaft lubrication intervals.

Weekly Inspection Checklist

1. Check all parts of the system for visible damage or defects.
2. Clean all debris from the pump motor impellers and debris screen.
3. Assess the function of the pump by running it.

Warning

Disconnect power to the pump motor before performing visual inspection of pump impeller.

4. Inspect pump impeller for signs of damage, particularly on the leading (lower) edge of the impeller blades.
5. Inspect the one-way flapper valves on the pump exit duct (inside the bucket) for cuts or tears.
6. Inspect the motor conductors for cuts or signs of chafing or wear. Immediately repair any damage to the conductor cable installation.
7. Ensure each cable connector is securely attached to its cable and free from cracks or damage.

Pump Output Shaft Lubrication

The pump output shaft must be lubricated periodically to preserve the life of the seals. Good seal condition will prolong the life of the motor by preventing moisture and other contaminants from entering the motor case. Lubrication will require a hand pump grease gun with a standard hydraulic coupler.

Grease Procedure

Interval: All models, every 300 fill cycles.

Important Note

Regular air fills do not count as fill cycles if pumps are not operated.

1. Remove the three nuts securing the filter basket to the top mount ring and pull the filter basket free from the pump assembly.
2. Gently apply one to two pumps of grease to the grease nipple using enough to purge grease through the seal.
3. Check for dirt or gravel accumulation between the seal cup and the bottom shank of the impeller. Also, clean out any dirt and debris that may have accumulated inside the filter basket.
4. Re-install the filter basket.

Unscheduled Maintenance

Unscheduled PowerFill Maintenance Procedures

Please follow the procedures described in this section for maintenance on the PowerFill Snorkel pump unit.

1. **Removal and installation of the discharge hose:** The discharge hose has to be stretched slightly to fit over the discharge elbow and the pump housing. When removing or replacing the hose, undo the hose clamps completely and work the hose from side to side while restraining the pump unit and/or discharge elbow. When installing the hose, apply soapy water or a small amount of petroleum jelly to the inside lip of the hose to assist in getting the hose over the nipple. Use a round rod or screwdriver to help pry the hose onto the nipple – in a manner similar to changing a bicycle tire. If you have a new piece of hose, cut a 1/8" (3 mm) chamfer on the inside edge of the hose before installation.
2. **Two O-ring seals reside in the filter mount ring:** One seals the pump housing and one seals the interface between the filter basket. Whenever the filter basket is removed, always check the condition of the mating seal. If cut or broken, it should be replaced with a new seal. If disassembly of the pump proceeds to the point where the pump housing is separated from the filter mount ring, replace the mating seal.
3. **Conductor cable seal:** If removing the pump motor, impeller or impeller housing, you will need to break the silicone RTV seal at the conductor cable through the point on the filter mount ring. Upon reassembly, apply a small amount of silicone RTV sealant to re-seal the cable.

Important Note

A good seal at the filter mount ring will prevent pump cavitation in water less than 16" deep.

Section 7: Valve Maintenance

Bambi MAX Valve Replacement

Valve Removal

Whenever any valve maintenance, such as seal changes or maintenance on the valve cycling, has to be done, we recommend that you remove the valve from the Bambi MAX shell. To remove the valve, follow the steps listed below. Tools required: ratchet and 9/16" socket, side cutter.

1. Make sure that the ballast is on the bottom of the shell before removing the valve. Detach the power cable from the head and IDS deployment cable, coil the cable into an 18" coil and place it inside the top of the shell.




- Next, detach one spoke from the shell; this spoke should be in the 5 o'clock location.



- Push the spoke into the bucket and attach to the opposite spoke.



- Now, remove the four bolts holding the valve to the bottom plate.

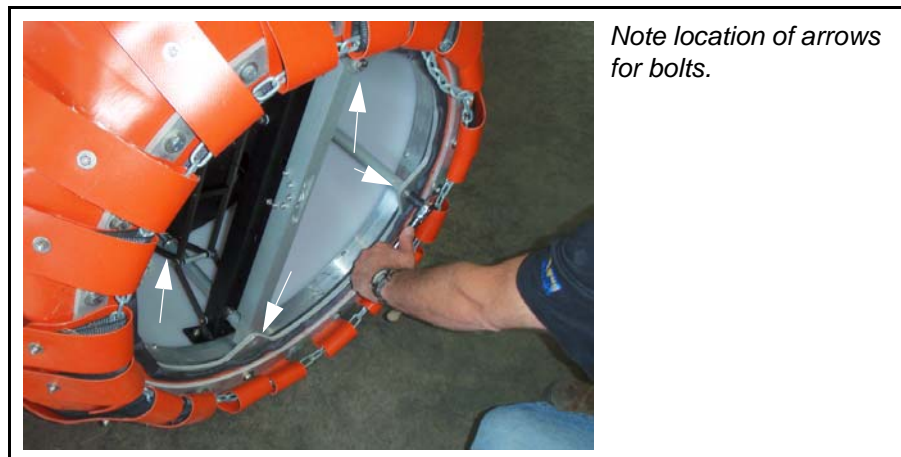


5. Roll valve out of shell and move to repair area.




Valve Installation

The following steps will allow one person to easily install the valve.

1. Making sure the ballast is still at the bottom, roll the valve through the opening. Leaving the control cable at the top of the shell, roll the valve to the base of the shell.
2. Place the valve inside the valve-guard, then rotate the valve until the control box is in the position shown in the picture below.

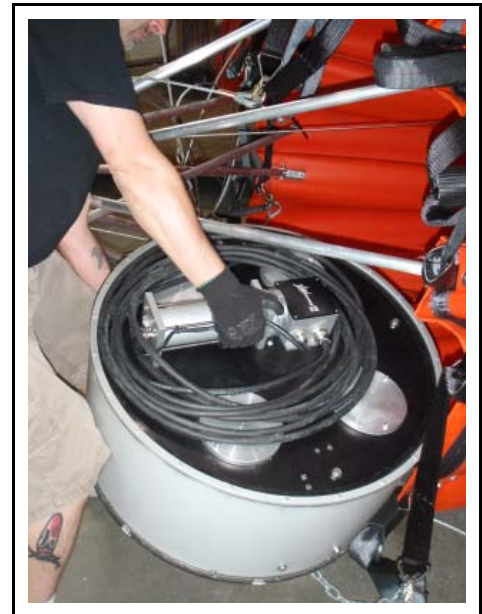

3. Now, go around to the base of the bucket and insert the four 3/8" bolts. Some rotation may be necessary to line up the standoffs to the bottom plate holes. When lining up the holes, always move the standoff to the nearest bottom plate hole.

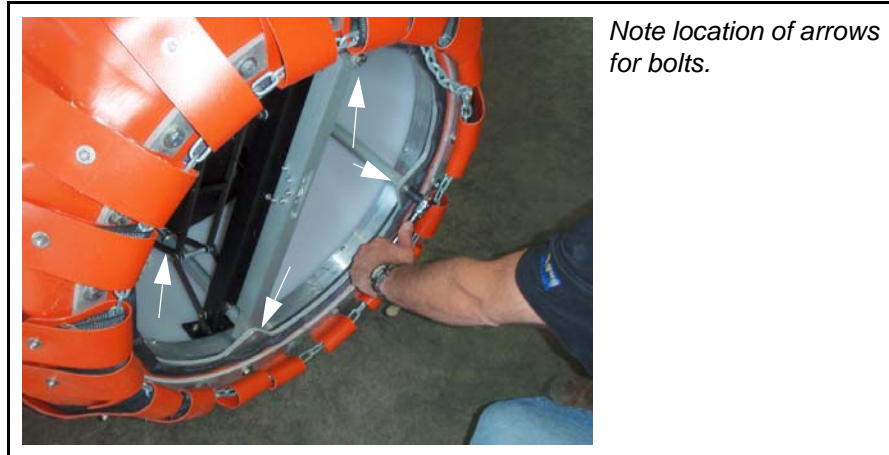

4. Next, string the control line. Before unrolling the coil of cable, pass it through the center of the IDS hub. Once all the cable is outside the bucket with no slack inside the bucket and the IDS is fully extended, push six inches of the control cable back into the bucket. Now, using one or two tie-wraps, attach the cable to the deployment cable eye on the hub.



5. Reattach the control cable to the IDS deployment cable using tie-wraps or tape spaced about 36" apart. At the head, the final attachment will be at the IDS cable shackle.



Bambi MAX Seal Replacement

If either seal has to be changed, we recommend that the valve be pulled from the shell although it may not be necessary to detach the control cable from the IDS deployment line. Depending on circumstances, the valve seals can be replaced while the valve is next to the shell but the valve should be placed on a clean level surface such as a piece of cardboard or plywood.

To remove the valve, please refer to the valve removal section in the maintenance section of this manual. Once the valve has been removed, follow the directions below.

Bottom Seal Replacement

Tools required: Ratchet 1/4", drive extension short socket 5/16" or slot screwdriver.

1. To make the valve more stable, open the valve until the top of the tube is level with the top of the motor and cut the power to keep it in this location. If you have several Bambi MAX buckets, a Power Pack is available from SEI. This Power Pack can also be used as the main power source for operation of the bucket which eliminates wiring the helicopter for the Bambi MAX.



Valve in partially open position and shown with the Bambi Power Pack.

2. Turn valve over, as shown in this picture.




3. Loosen the four hose tensioners and lower the clamp into the position shown in this picture.



4. Remove the seal and clean any debris from the bottom of the tube and groove.

5. Install the replacement seal and move the clamp into position. Make sure that two of the tensioner clamps are located between the lift bar bolts.

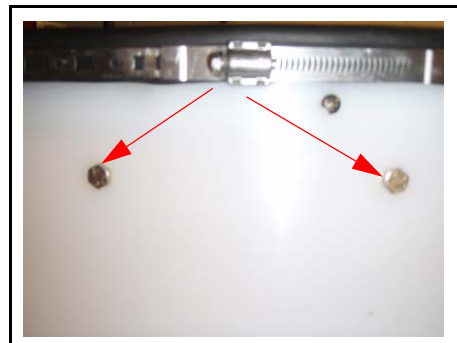

6. Tighten the tensioner clamps. Make sure to tighten each clamp equally as this will eliminate a problem of the clamp releasing as one of the tensioners is not engaged enough to hold the clamp.

Top Seal Replacement

Replacement of the top seal doesn't necessarily require removal of the valve unless you are planning other maintenance functions at the same time. To remove the valve, please refer to the valve removal section in the maintenance section of this manual.

Tools required: Allen key 1/8"

1. To replace the top seal with the valve still in the bucket, first detach the control cable from the head and the IDS deployment cable and hub. Coil the cable up and place it inside the top of the shell.



2. Remove all the Allen head bolts from the top clamping ring. These bolts are extra long to give us maximum holding strength in plastic.



3. Remove the top ring and pass the coiled control cable through the middle of the ring.
4. Take the ring and old seal out of the shell. Place the ring on a level surface with all bolts inserted into the ring.



5. Slip the new seal over the bolts and return the ring with seal to the shell. Pass the control cable through the ring, making sure to pass the cable through from the seal side.



6. Now, start all bolts into the tube, turning them in about 1/8". This allows you to locate the holes in the tube easier by lifting the ring and seal to see the holes.



7. Tighten all bolts equally as they are going into plastic. Do not over tighten as you would in metal.

8. String the control line and, before unrolling the coil of cable, pass it through the center of the IDS hub. Once all the cable is outside the bucket with no slack, push it 6" back into the bucket. Now, using tie-wraps, attach the cable to the deployment cable eye on the hub. Use at least two tie-wraps.



9. Reattach the control cable to the IDS deployment cable using tie-wraps or tape spaced about 36" apart. At the head, the final attachment will be at the IDS cable shackle.

Drive Cable Replacement


Tools required: Cable cutter or sharp side cutter, Allen key 7/64", wrench 5/16", heat shrink tubing 1/8", heat gun.

If the helicopter is not available as a power and activator source, a 24-28 DC power source can be used. Connect the negative line to the narrow blade on the plug and the positive to the round pin. The valve will be in the closed position. To open the valve, touch the positive wire to the wide blade on the plug. If the valve doesn't operate, check that the wiring in the plug hasn't been changed. Open the plug and check the green wire which should go to the green screw, black wire to brass screw and white wire to silver screw.


Removing the existing cable.

The drive cable can be replaced with the valve in the bucket but, if you are doing other maintenance work on the valve, it will be easier to change the cable outside the bucket.

1. Cut the cable below the lift bar.
2. Remove the cable retainer from the lift bar.
3. Remove the cable by pulling the unswaged end through the sheave and lift bar.

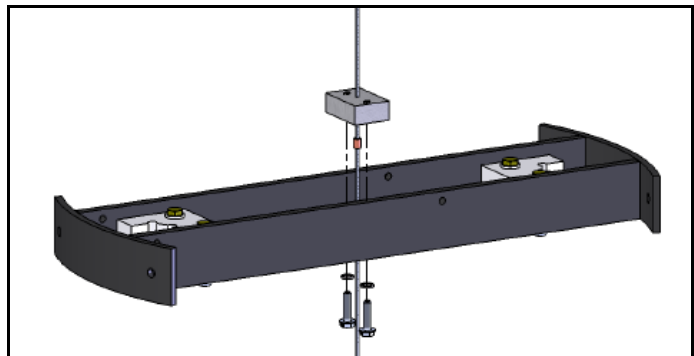


4. To remove the cable ends from the cable anchors, the motor will have to be started and stopped when a cable anchor is close to the top. Now, loosen the two cable anchor screws and pull the cable through. Then, activate the motor again to get the second cable anchor to the top, loosen the two cable anchor screws and pull the cable out.

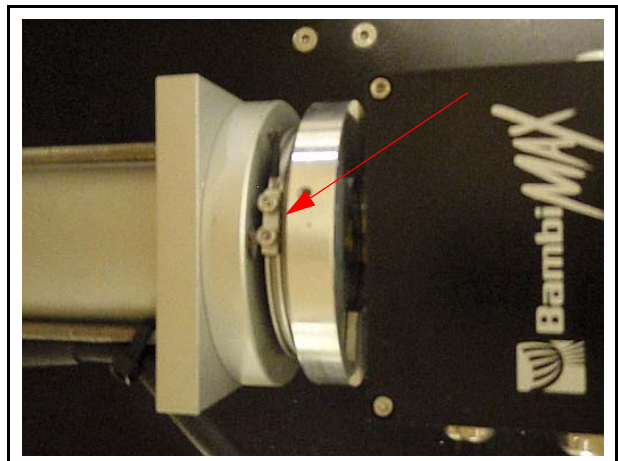


Installing the new cable.


1. Examine the new drive cable to determine the shorter end.
2. Insert the short end of the drive cable into the cable retainer, then insert the long end of the cable through the hole in the lift bar.

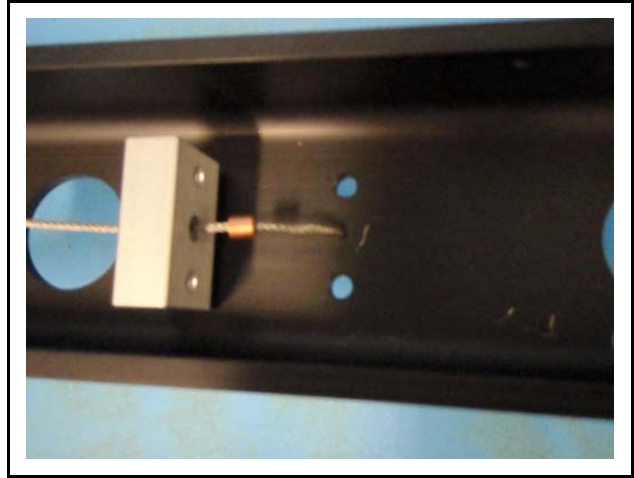

3. Secure the cable retainer to the lift bar.

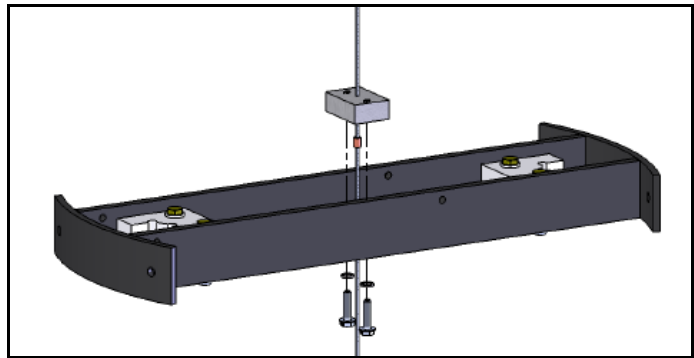


4. Trim the short end of the drive cable and insert the cable through the cable bushing.

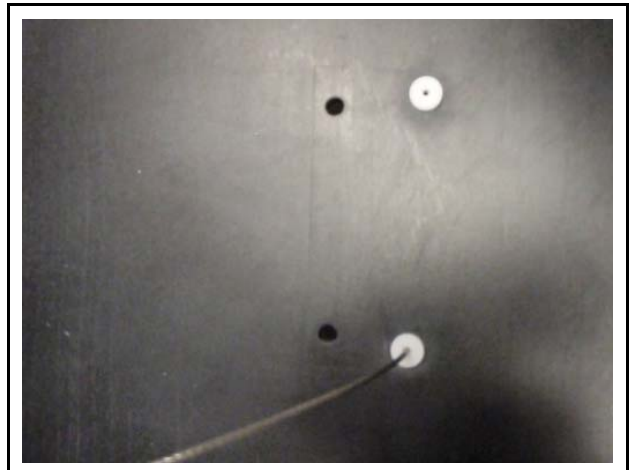


5. Connect the power control cable to a 24-28 volt DC power source, open the valve about a 1/3 of the way and cut the power. The cable anchor should be close to the position shown in this picture. Now, feed the cable through the cable anchor, pull it snug but do not tighten.




6. Install a 3/8" spacer plate between the sheave bar and lift bar. Place a heavy weight on the lift bar to hold it down.

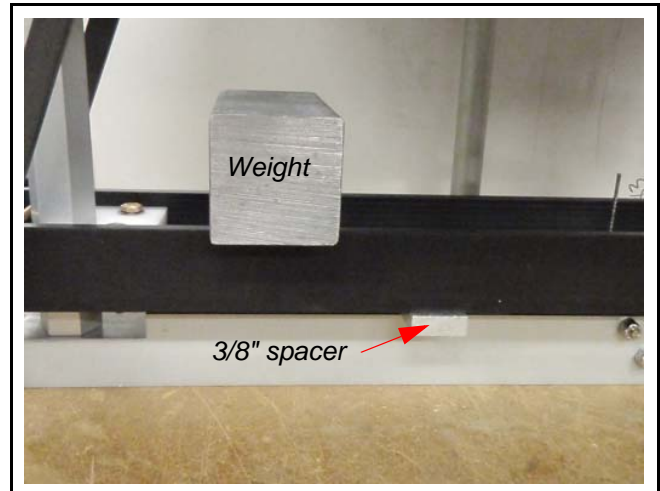


7. Turn on the power. The valve will close. Pull the cable tight and secure with cable anchor screws.

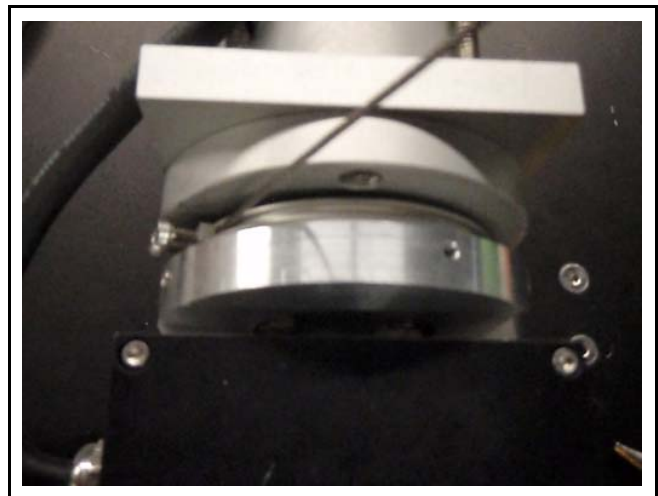


8. Install a piece of 1/8" x 1" heat shrink over the cable next to the anchor. Cut off the excess cable as close to cable anchor as possible.

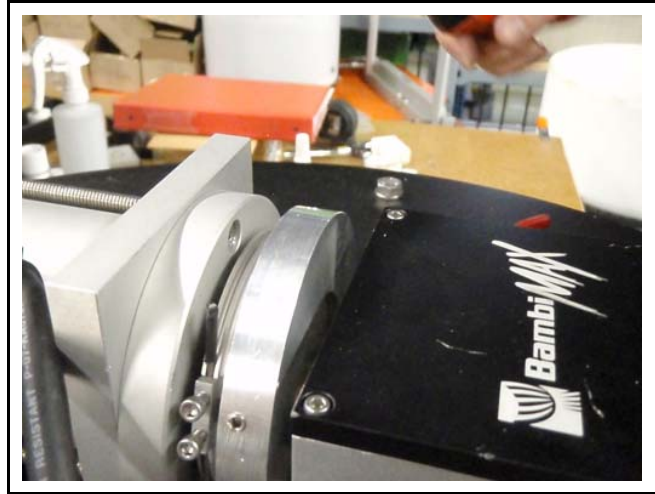


9. Remove the weight and spacer from the lift bar, install the cable over the five sheaves and trim the end of the cable. Now, pass the cable to the inside of the carrier cross bolt, through the cable bushing in the top plate.

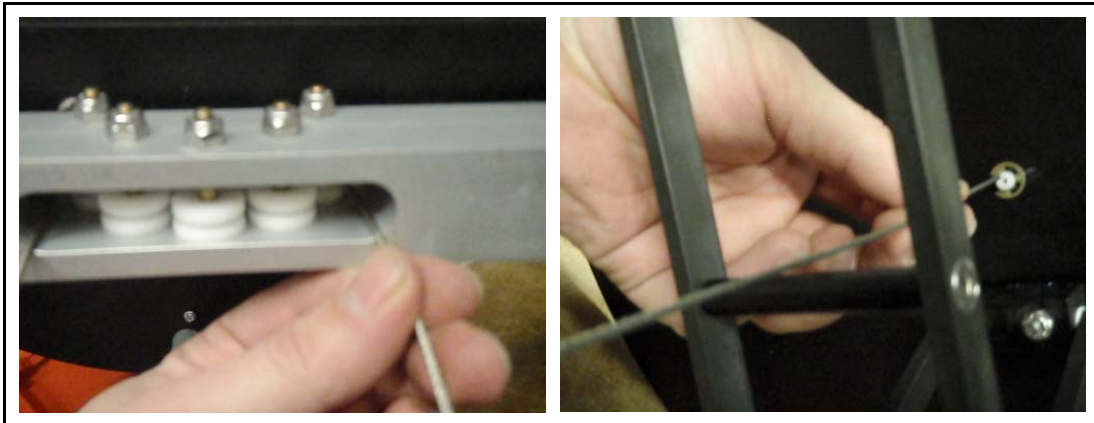

10. Turn on the power and open the valve to its full open position. Install the cable through the second cable anchor and, then, pull the cable tight and secure with cable anchor screws. Install a piece of 1/8" x 1" heat shrink over the cable next to the anchor. Cut off the excess cable as close to cable anchor as possible.

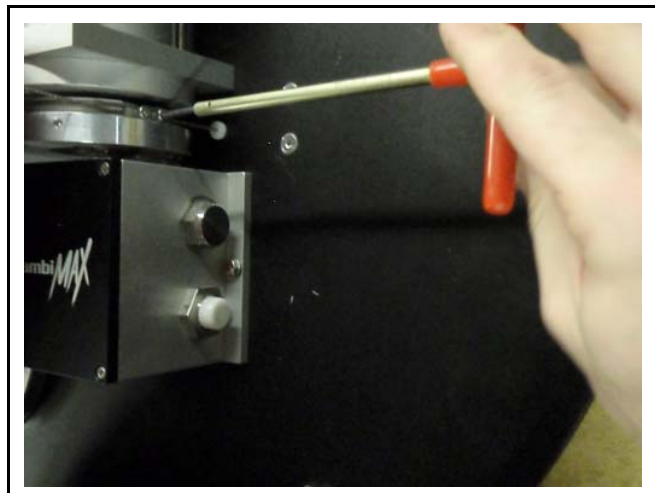


11. Cycle the valve several times at both the fully open and fully closed actuator cam to see if there is any movement like a second hand on a clock. If there is, this means that the cam needs adjustment. When the valve is open all the way, the green light should be on and not flashing. When it is closed, the amber light should be on and not flashing. Please refer to the cam adjustment information in this section to resolve any movement/flashing light issues.

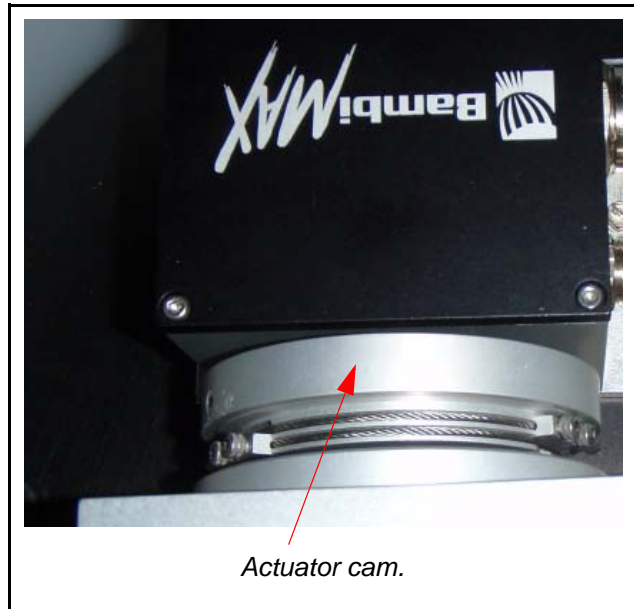

Changing the Guide Bushings

To change the guide bushings, follow the steps listed below.

1. Open the valve about half way.
2. Remove the two bolts holding the old bushings in place and remove the old bushings.
3. Place the new bushing into position.
4. Insert the bolts, attach the nuts and tighten.
5. Run the valve up and down. If any slowing of the valve movement or jamming is noticed, loosen the bolts on one bushing and pull the valve body away from the center of the valve and re-tighten the bolts.
6. If slowing or jamming still occurs, loosen the guide bushing bolts on the opposite side and repeat the operations of step 5.
7. The valve should be opened and closed several times. If it operates as it should, the bushings are changed correctly.

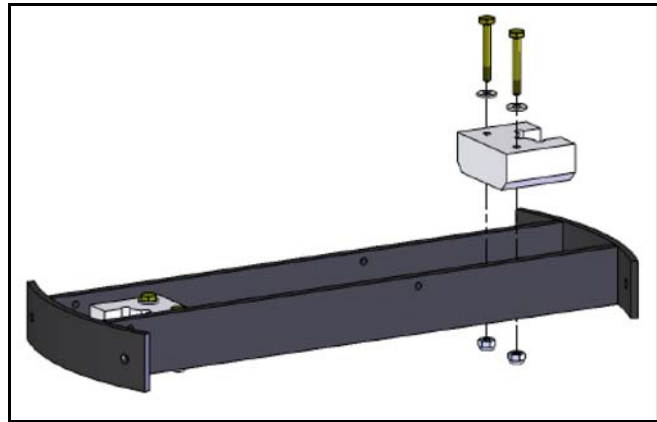


Section 8: General Repairs

Repair Instructions


Suspension Line Replacement

A suspension line should be replaced whenever it displays noticeable kinking or fraying. Factory replacement lines come pre-swaged with connection links to make replacing quick and easy.

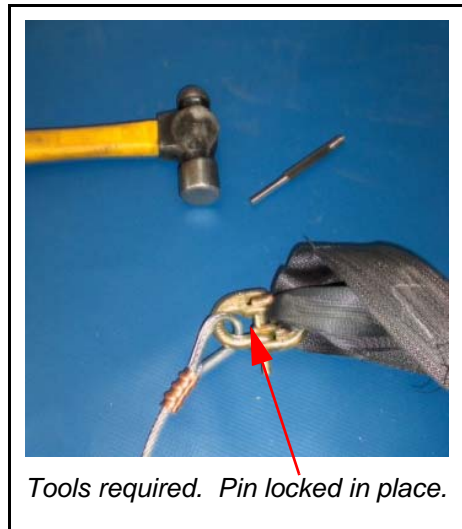

To remove the connecting link (connecting the suspension line to the M-strap), follow these procedures.

Locate a metal bar with a 5/16" hole (or drill a 5/16" hole into any metal bar). If you are unable to locate a metal bar, a wooden block will work, however, make sure to drill the hole into the end grain.

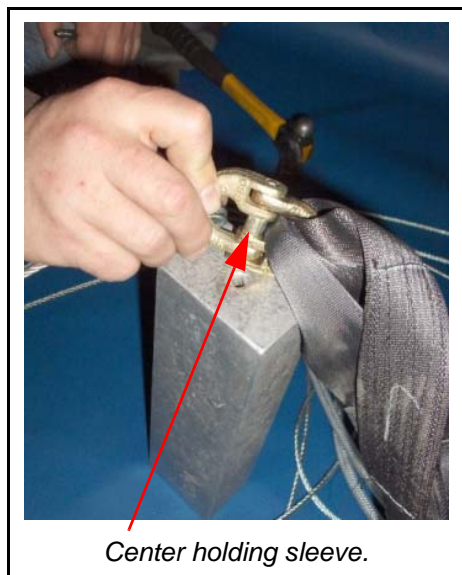


8. Place the connecting link with the pin located over the hole and using a 3/16" punch, drive pin through the center holding sleeve.
9. After the pin is free, remove the old suspension line. Place the new line in the connecting link by inserting the pin into one side of the connecting link. Using a hammer, drive the pin in until it is flush with both sides of the connecting link.



M-Strap Replacement

Replace M-straps if they become noticeably worn. M-straps may be repaired, if frayed, by melting the fray with a lighter to stop the fray from spreading. The length of the M-strap is critical to the proper functioning of the Bambi MAX and we recommend that you replace worn straps with factory-supplied equipment.

There are two types of straps; long webbing and short webbing. Long webbing are used for the diagonal straps while short webbing are used for the vertical straps.

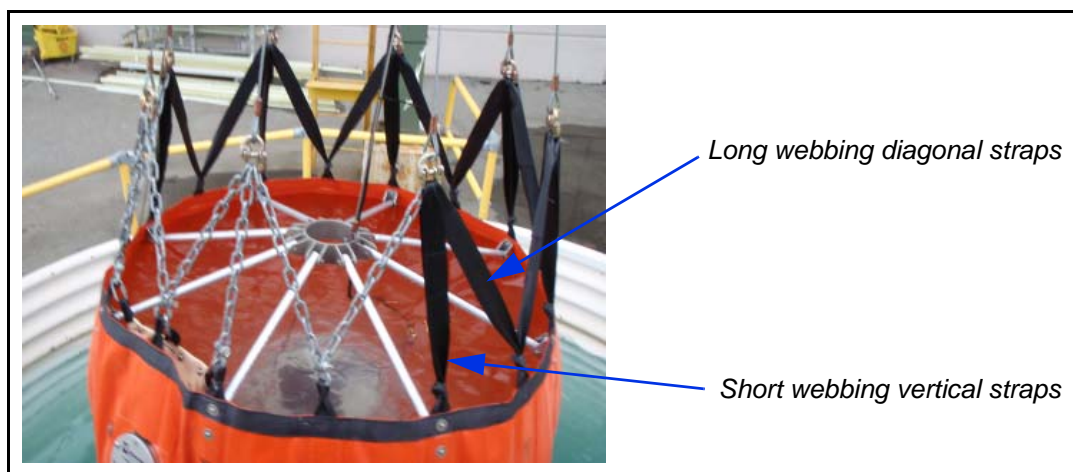

When replacing straps, do one set at a time to avoid confusion. Cut off the old straps from the shackle and un-tie them from the top of the bucket shell. Attach replacement straps as per the originals.

Removing Old M-Straps

1. Using needle nose pliers, insert the tip under the top webbing layer.



2. Fully insert the pliers at the far left hand side of the top layer.



3. Holding the pliers tight, turn your hand clockwise. Repeat the operation until the knot is loose enough to remove the strap.



Installing New M-Straps (Short)

Once the old straps have been removed, the new strap installation can begin.

1. Rotate the strap until the joint is centered.



2. Pass the strap through the loop.



3. Twist the loop eye 180 degrees.



4. Rotate the eye to the opposite side.



5. Pull strap end through the eye.



6. Pull strap tight.



Installing New M-Straps (Long)

Once the old straps have been removed, the new strap installation can begin.

1. Locate the center of the strap.




2. Pass the strap through the loop.



3. Twist the loop eye 180 degrees.



4. Rotate the eye to the opposite side.

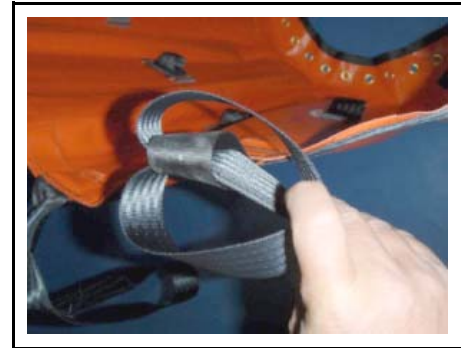

5. Pull strap end through the eye.



6. Pull the strap tight.



7. The M strap set should now look like this. The suspension line attaches to the top of each M-strap set.




Bottom Loop Repairs

If the bottom loops, which hold the chain, become worn, the frays can be melted with a lighter to prevent them from spreading. If the bottom loops require replacement, they should receive an overlay of heavy duty wear-resistant webbing.

Bucket Patching

Please see *Bucket Repairs* in this section.

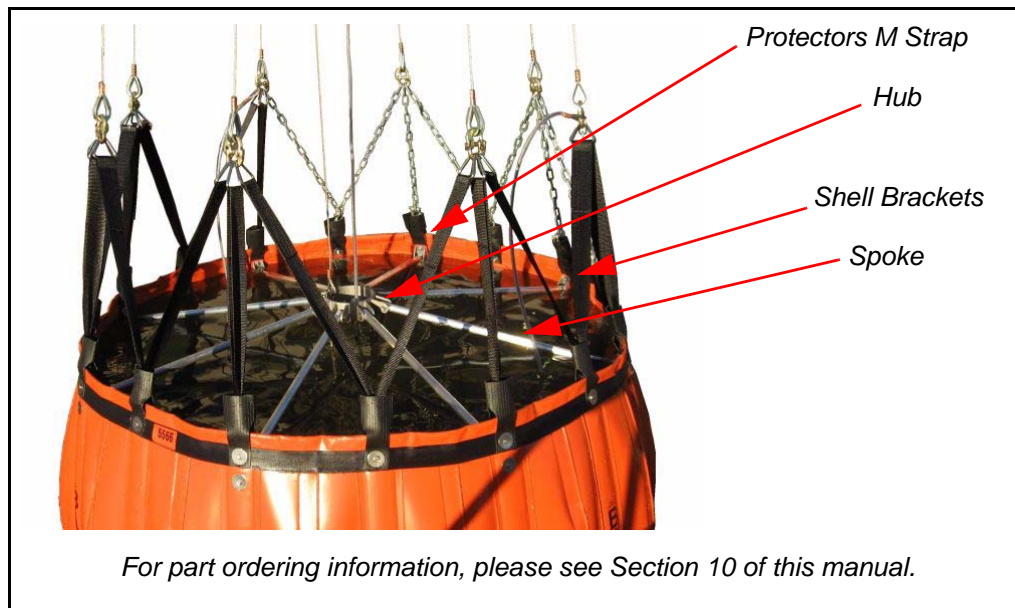IDS Hub/Spokes Replacement

The IDS can be purchased either as a complete kit or as individual pieces, as required. Follow the procedure below to replace the entire assembly.


1. Start by removing the old IDS including the shell brackets and the old restrainer cable brackets. You will have to disconnect the tripline from the valve or control head since the tripline passes through the hub.
2. For re-assembly, first install the new shell brackets. This can be accomplished by installing the bolts through the bucket shell, fitting the fabric wear strips onto the bolts and, then, fitting the brackets to the bolts. Install and tighten the Nylock nuts.
3. Install the two restrainer cable brackets. One is found below the ballast and the other is directly opposite (6 o'clock position). No wear strips are required for the restrainer cable brackets.
4. With the ballast oriented at the 6 o'clock position, rotate the IDS assembly so that the deployment cable faces upward and it's at the 3 o'clock position.
5. Attach the two spokes at either side of the 12 o'clock position using the stainless steel clevis pins. Complete by fitting the fender washer and cotter pin. Working around the bucket perimeter, attach the rest of the spokes.
6. Once the IDS is fully installed, test for fit. You should be able to pull the hub past the midpoint position with a slight effort. If the IDS is either too loose or too tight, it will require adjustment.
7. Remember to re-attach the tripline to the dump valve, passing the line through the hub. Also, attach the IDS deployment cable to the control head small adjustment chain.
8. Attach the two restrainer cables.

If the IDS is too tight, adjust two of the spokes as follows:

1. Cut off the spoke just above the existing hole on one end only. Then, redrill a new hole centred the same distance from the new end of the spoke as the other spokes. This will likely produce a good fit.
2. If the IDS is still too tight remove another spoke, on the opposite side, and repeat the above steps.
3. These two spokes are across from each other. **Note:** Newer bucket spoke bolt holes are in the same location.

See parts section for detailed parts listings.

IDS Detailed Drawing

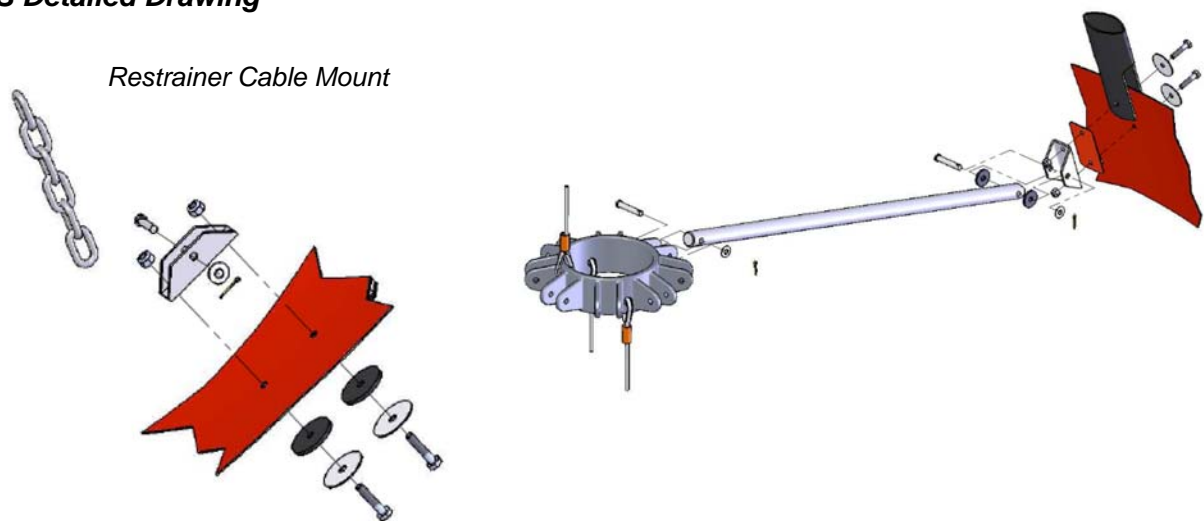

Load Test on the Hook

Deployment cable adjustment can only be properly assessed on the hook of the helicopter or otherwise suspended with a full load of water. For this test, with retrofits, the deployment cable is attached to the middle link of the adjustment chain. Check tension in the deployment cable. Under full load, the deployment cable should feel relaxed but not slack. The hub should be free to move up or down about 1/2" (13 mm).

Bambi MAX Shell Repairs

Please read these instructions carefully and follow them exactly to obtain a good repair. Failure to follow these instructions or poor repair workmanship can lead to failed repairs and/or more damage to the bucket.

Before commencing repairs using glue, the weather should be warm (above 60 deg. F or 15 deg. C) and dry.

Important Note

Try a test repair before attempting to repair the bucket. This will verify your technique without risking damage to the bucket. It is much harder to fix a repair once a failed attempt has been made as the hardened glue is difficult to remove.

Repair Failures

Repairs will likely fail if:

- The area to be repaired is not perfectly clean and scrubbed to a matte finish before applying the patch.
- Repairs are attempted during wet or cold weather.
- The glue and patch are not properly placed, creating air bubbles between the glue and the patch.
- The patch is not weighed down for 24 hours.
- The bucket is used before the glue has set.

Important Note

Dura-Seal glue has been designed specifically for the SEI family of fabrics. The shelf life of this adhesive is about one year. Fresh adhesive can be obtained directly from SEI Industries Ltd.

Repairing in High Humidity

In conditions of high humidity, a proper technique is essential for securing the bond strength desired. The presence of surface moisture can destroy the effectiveness of the cemented bond.

The evaporation of solvent from the adhesive may reduce surface temperature below the dew point resulting in condensation of water vapour on the surface of the adhesive. This is often visible as fogging or a milky white appearance on the surface.

The use of a solvent to clean the surface prior to cementing can also reduce temperatures below the dew point.

To overcome the high humidity problem, raise the temperature of the patch area. This can be accomplished with a warm air fan.

Warning

- Glue vapours are highly explosive! Explosive vapours may occur causing fire and/or injury. Keep away from all sparks, flame, lighters or cigarettes.
- Solvent and glue are both extremely hazardous. Use solvent and glue under well ventilated conditions only.
- Use an approved respirator mask to avoid breathing fumes.
- When using a warm air fan, either use one which is rated EXPLOSION PROOF or make sure that there is a steady flow of air past the work area to remove fumes as they are generated.

Making Temporary Repairs with Sealing Clamps

Repair clamps are used for an immediate repair to prevent the loss of liquid through large rips or holes. For example, if a vehicle accidentally backed into a bucket and caused a 3" (76 mm) long rip in the bucket, a repair clamp could be inserted to stop the loss of liquid. Repair clamps are only used for temporary repairs. The damage should be permanently repaired with a patch when the bucket can be set aside for 24 hours.

Important Note

Leaving the clamp's string on makes it easier to remove the repair clamp when placing a permanent patch on the bucket.

1. Select the largest clamp that will just slip through the hole in the item. The size of cut or hole will determine the size of the sealing clamp to use.
 - For a cut or hole up to 2" (5 cm), use a 3" (7.6 cm) clamp (supplied).
 - For a cut or hole up to 4" (10 cm), use a 5" (12.7 cm) clamp (supplied).
 - For a cut or hole up to 6" (15 cm), use a 7.5" (19 cm) clamp (special order).


Caution

Use caution if deciding to enlarge the slit to insert a clamp. It is very easy to make the slit too large.

2. Keeping hold of the string, slip one half of the repair clamp through the hole as indicated.



3. Pull the bolt up through the hole. Turn it until the clamp lines up with the hole.

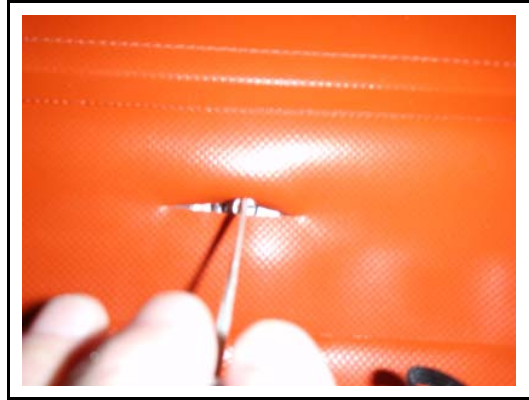

4. Place the top of the clamp over the bolt.



Caution

Tightening the nut with tools may break the bolt away from the lower clamp. Overtightening can also deform the clamp and cause leaks.

Temporary Repairs Using Glue

Important Note

Allow repair to harden for 24 hours at room temperature before using the item.

Applying the Glue

Small scrapes, damaged fabric coating or pinholes, which are not leaking, can be repaired with glue only. They do not require a patch. (A small scrape is defined as damage to the outer fabric coating only. A pinhole is defined as a small puncture that is not leaking.) However, damage to the base fabric must be repaired with a patch.

1. Fill the weight bag with water prior to beginning repairs.
2. Clean the area to be repaired with an abrasive pad dampened with solvent. Remove all traces of masking tape, if previously used. If possible, place a piece of masking tape on the back side of the item being repaired.
3. Paint the damaged area with glue. Use a thick coat of glue, overlapping the edges of the repair by 1" (25 mm). Be sure that the edges are well coated. A damaged coating should be given two coats of glue. Apply the second coat within four hours of the first coat.



Clean and apply masking tape on the backside of the tear.




Squeeze glue around the tear and spread with fingers.

Gluing with Patches


If there is dampness around the area to be patched, then dry the area with a hot air fan or heat gun. Any loose coating should be cut back with scissors.

1. Support the damaged area on a flat, solid platform. This platform should be strong enough to support the fabric (flat) and allow the patch to be rolled once it is in place.

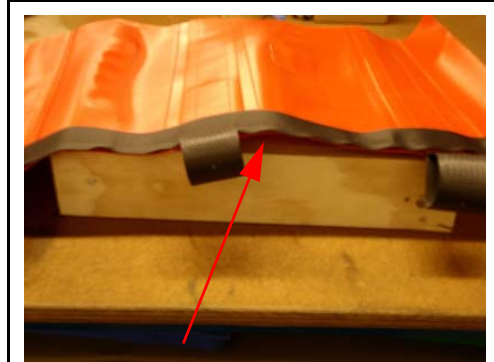

The damaged area should be supported on a flat, solid platform.

2. Scrub the damaged area with an abrasive pad dampened with solvent (isopropyl rubbing alcohol is recommended). Scrub vigorously to remove the cured surface. The area should be clean and dry with a dull matte finish.

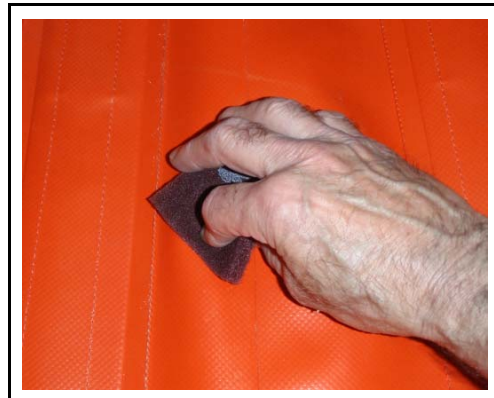

Caution

Solvent will damage the fabric if too much is used or if the fabric is left exposed to solvent residue.

3. Wipe with a rag, dampened with solvent, to remove any residue from cleaning. Check to see if the area is totally clean and all coated surfaces and edges are dull. If not, repeat the cleaning. This is critical for a good glue bond.

Cutting the Patch

1. Cut a patch. The patch should be at least 2" (50 mm) larger in every direction from the damaged area. A round patch is recommended but, if a rectangular patch covers the damage better, then round all corners. Clean the patch by scrubbing with a pad dampened with solvent. Rub vigorously to remove the gloss from the fabric. Clean **both sides of the patch**, as it is easy to get the patch turned over during installation. Another reason the patch should be cleaned on both sides is that it will be painted with glue, on the outside, later.



The color of patch will vary, depending on the product repair kit.

Applying the Patch

1. Apply the Dura-Seal glue to the patch and damaged area. Wait 30 minutes (at 75F or 22C) for some of the solvent to evaporate from the glue. The glue should become thicker but still be quite wet. If it has been allowed to dry too long, give both sides another thin coat. If the glue has dried too long, it will be difficult to avoid entrapping air bubbles in the bonded joint.
2. Place the patch and roll it down with the roller. Place the centre of the patch down first, then roll it out towards the edges with the roller. This expels trapped air. Once the patch is rolled down, do not let it lift up. This will prevent air from getting under the patch which causes a weak bond.



3. Weigh down the patch. Place a plastic cover sheet over the patch followed by a weight bag for 12 hours at room temperature. Remove the weight bag and leave to dry for 24 hours.

4. If the patch will be subjected to abrasion after 24 hours, paint over the patch with glue. Painting the patch also provides protection from ultra violet light and weather. Allow the bond to harden for 24 hours at room temperature before using the item.



Hot Air Gun Patching

On most items, hot air gun patching is the preferred method because it provides the most durable, permanent repair possible.

Tools and materials required:

- Patches
- One plastic hand-held roller
- One hot air gun, Steinel HL 1800 E or equivalent: 120 V-1500 W (800 to 1100 deg. F, 450 litres per min.)
- One wide surface nozzle
- Isopropyl alcohol
- Scissors

Warning


It is extremely dangerous to use a hot air gun in the presence of flammable fumes such as gasoline or paint thinner. There is a high risk of explosion and/or burns.

Warning

Injury, especially to hands and fingers, can occur when using a hot air gun. Most welding will occur at temperatures of 800-1000 degrees F. Wear gloves to protect skin from overheating, burning and blistering.


Hot Air Gun Procedure

1. In a well-ventilated location, clean the area to be repaired as well as one side of the patch with an abrasive pad. Wipe down the repair area and patch with isopropyl alcohol.
2. Mount a wide surface air nozzle on the hot air gun so as to direct the heat flow in a large pattern. Turn the power on, adjust the temperature in the low range first and let the hot air gun warm up. Increase the temperature as required during the operation. **DO NOT OVERHEAT OR BLACKEN THE FABRIC.**

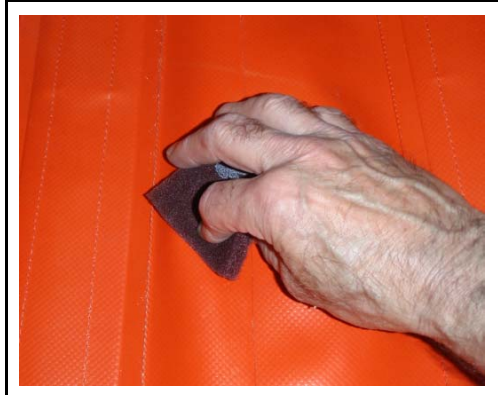**Caution**

Overheating can occur quickly and can damage the product. It's recommended that you test, using the supplied fabric samples, to determine the correct temperature to be used and the duration of heat to be applied.

3. Starting from the centre of the patch (held down by the roller), concentrate the heat flow equally to patch and fabric. Apply a light pressure with the roller when the fabric starts melting. This can be seen as small bubbles. **DO NOT OVERHEAT.**
4. Roll the patch down to fuse it to the fabric, moving roller and gun simultaneously. Repeat on the unfused portion of the patch. Let the repaired area cool down. Attempt to peel off at the edges with your fingers. If there is even a slight peel, repeat the operation locally. Otherwise, the repair is finished.

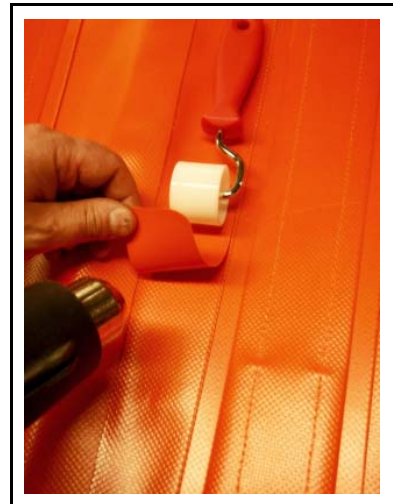

Repair Kits

Bambi Repair Kit 003613 (no glue)

Used for Bambi MAX's or other product lines where **no glue is required or allowed**.

Important Note

It is the responsibility of the dealer and end user to ensure that the importation of glue is allowed in the country of use.



Repair Kit Parts Table

PART NUMBER	DESCRIPTION	QTY.
02379	BOX, TOOL 16", PLS0.	1
003661	FABRIC REPAIR MANUAL	1
003608	BAG, WEIGHT	1
003064	PAD, ABRASIVE	2
003071	ROLLER, SEAM, 1 ¼	1
003074	SCISSORS	1
004502	CLAMP, REPAIR, SMALL, (2" HOLE)	1
004503	CLAMP, REPAIR, MEDIUM, (4" HOLE)	1
003856	PATCH, FABRIC, 32OZ. BAMBI	3

Optional Supplies

PART NUMBER	DESCRIPTION	QTY.
003090	ADHESIVE, DURA-SEAL ¾ OZ.	1
003091	ADHESIVE, DURA-SEAL 8 OZ.	1
004504	CLAMP, REPAIR, LARGE, (6" HOLE)	1

Section 9: Specifications and Parts

Capacity and Weight Specifications

Bambi MAX Model	Capacity			Gross Weight		Empty Weight	
	Imp Gal	US Gal	Liters	lb	kg	lb	kg
BBX4453	440	530	2000	4620	2100	220	100
BBX5566	550	660	2500	5790	2630	290	130
BBX6578	650	780	3000	6830	3100	330	150
BBX7590	750	900	3400	7850	3560	350	160

Note: Capacities and weights are accurate to within 5%. Specifications subject to change. Check original control head nameplate.

Caution


The selection of a Bambi MAX model for a specific aircraft is dependent on many factors including aircraft weight, fuel weight, operation elevation and atmospheric conditions.

The helicopter operator must select a bucket model which is appropriate for their specific situation.

The operator must also ensure that the bucket selected does not pose a tail rotor strike hazard.


Parts Listings

Bambi MAX Valve 25" Shell Assembly, Models 4453-5566

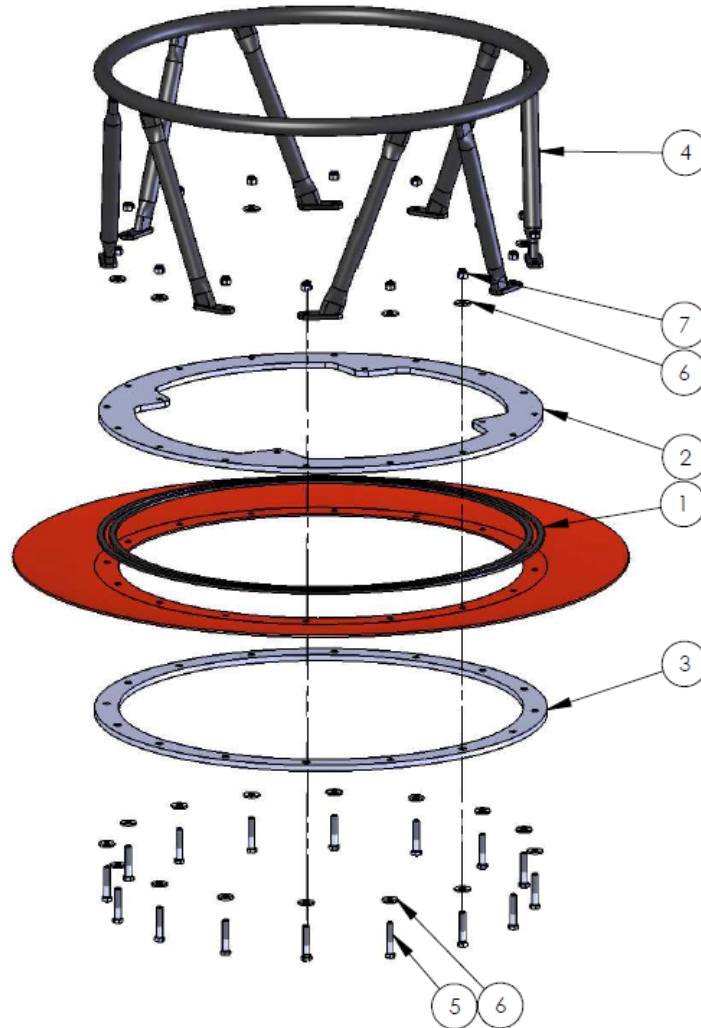


ITEM	MODEL	PART NUMBER	DESCRIPTION	QTY
1	BBX4453 — BBX5566	008229	TAPE, BUTYL, 440, 3/16 X 3/8"	15
2		007139	RING, BASE, 25", 4453MX-5566MX	1
3		007142	RING, CLAMP, 25", 4453MX-5566MX	1
4		006887	GUARD, VALVE, 25", 4453MX-5566MX	1
5		000394	BOLT, HX, 3/8-16 x 2, SS	16
6		001846	WASHER, FLAT, 0.39 x 1.00 x 0.125, SS	24
7		001665	NUT, HX, NYLOCK, 3/8-16, SS	16

Bambi MAX Valve 25" Shell Assembly, Models 6578-7590

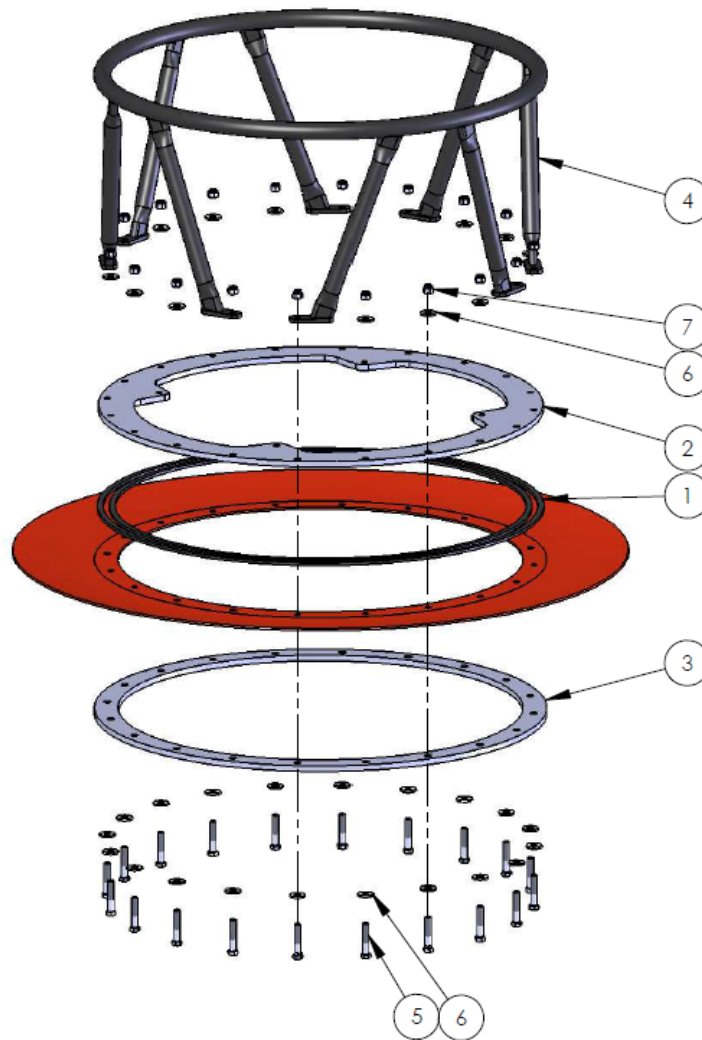


ITEM	MODEL	PART NUMBER	DESCRIPTION	QTY
1	BBX6578 — BBX7590	008229	TAPE, BUTYL, 440, 3/16 X 3/8*	15
2		007140	RING, BASE, 25", 6578MX-7590MX	1
3		007143	RING, CLAMP, 25", 6578MX-7590MX	1
4		006888	GUARD, VALVE, 25", 6578MX-7590MX	1
5		000394	BOLT, HX, 3/8-16 x 2, SS	20
6		001846	WASHER, FLAT, 0.39 x 1.00 x 0.125, SS	30
7		001665	NUT, HX, NYLOCK, 3/8-16, SS	20

Bambi MAX Valve 25" Installation

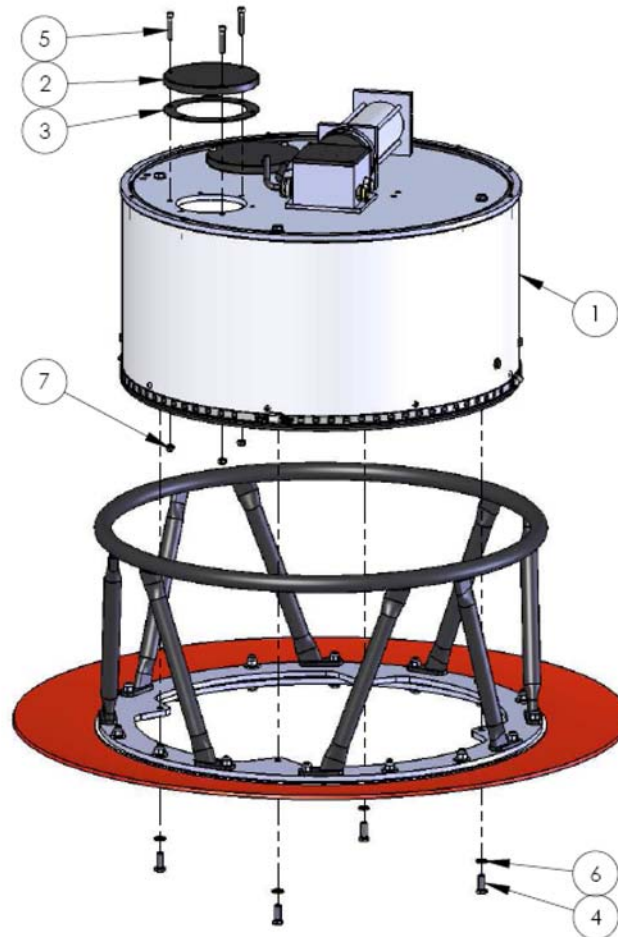


ITEM	MODEL	PART NUMBER	DESCRIPTION	QTY
1	BBX4453 - BBX7590	002299	VALVE, 25", ASSEMBLY, 4453MX-7590MX	1
2		007340	PLATE, BLANK, PUMP, 4453MX-7590MX	2
3		005755	GASKET, PUMP	2
4		000391	BOLT, HX, 3/8-16 X 1", SS	4
5		005773	SCREW, SC, 1/4-20 X 1 1/2" SS	6
6		001853	WASHER, LOCK, SPLIT, 3/8, SS	4
7		001662	NUT, HX, 1/4-20, SS	6

Bambi MAX Valve 25" Seals

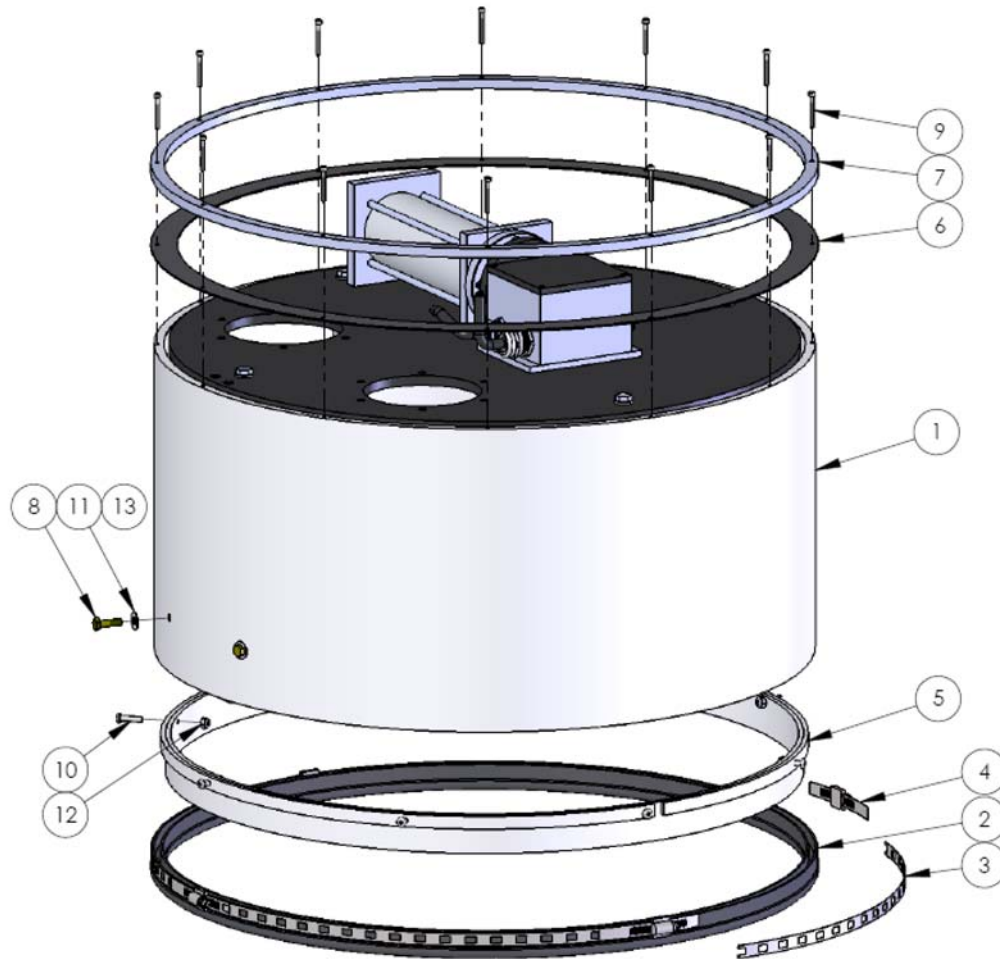


ITEM	MODEL	PART NUMBER	DESCRIPTION	QTY
1	BBX4453 - BBX7590	007116	TUBE, VALVE, 25" MACHINED	1
2		006421	SEAL, VALVE, BTM,25" 4453MX-7590MX	1
3		002328	CLAMP, HOSE, 1/2", SS	5.0FT
4		002332	TENSIONER, CLAMP, HOSE, 1/2", SS	4
5		005770	RINGS, SEAL, SUPPORT, 25"	1
6		006332	SEAL, VALVE, TOP, 25", 4453MX-7590MX	1
7		007337	RING, SEAL, TOP, 25", 4453MX-7590MX	1
8		000009	BOLT, HEX, 1/4-28 X 29/32, CAD	4
9		000416	SCREW, SC, 6/32 X 1-1/4, SS	12
10		000496	SCREW, PNP, 10-24 X 7/8, SS	9
11		001833	WASHER, FLAT, 028 X 0.69 X 0.036, SS	4
12		001660	NUT, HEX, NYLOCK, 10-24, SS	9
13		001688	NUT, HEX, NYLOCK, 1/4-28, SS	4

Bambi MAX Valve 25" Actuator and Controller

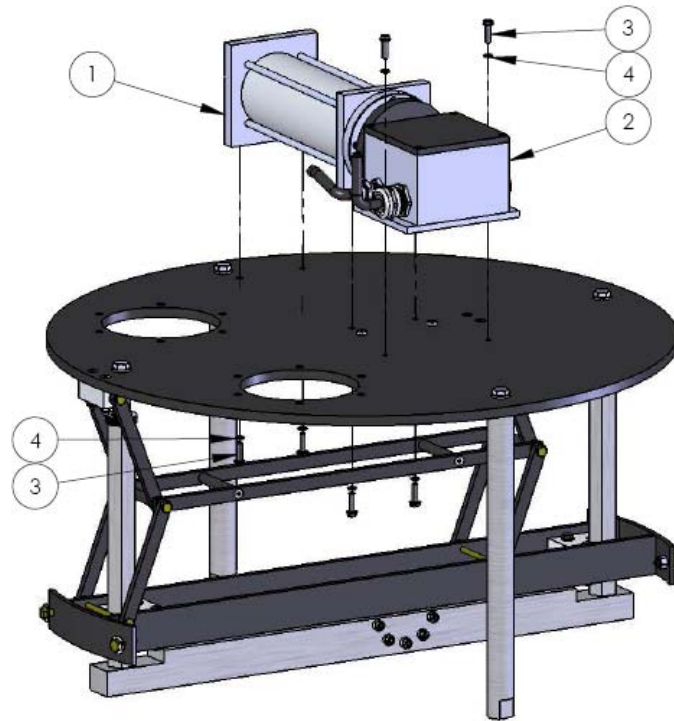


ITEM	MODEL	PART NUMBER	DESCRIPTION	QTY
1	BBX4453	000211	ACTUATOR, ASSEMBLY, 4453MX-HL9800MX	1
2		000206	IVC, ASSEMBLY, 1518MX-HL9800MX	1
3	BBX7590	001606	SCREW, 10-24 x 3/4", HXSL,SS	6
4		001848	WASHER, LOCK, SPLIT, #10, SS	6

Bambi MAX Valve 25" Actuator

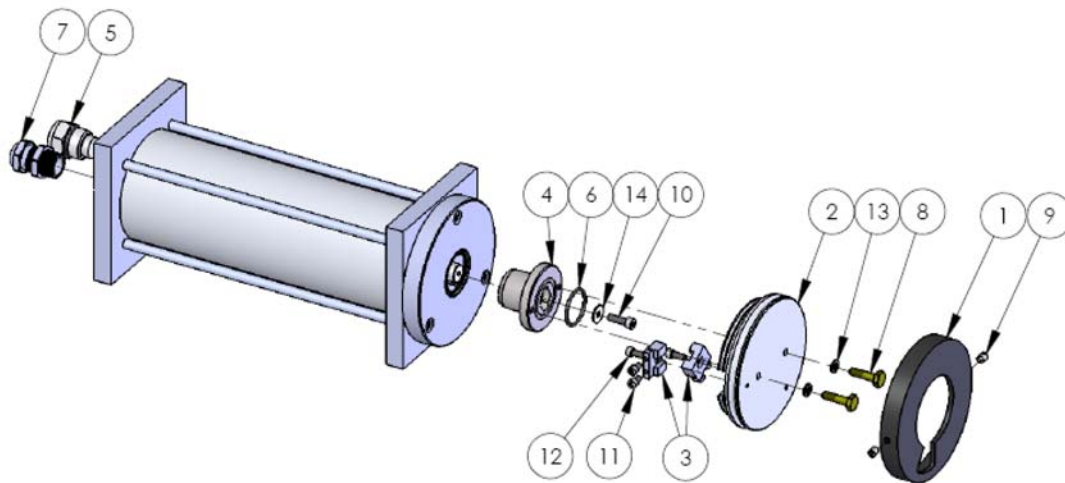


ITEM	MODEL	PART NUMBER	DESCRIPTION	QTY
1	BBX4453 - BBX7590	000223	CAM, SENSOR, 4453MX-HL9800MX	1
2		000220	DRUM CABLE, 1518MX-HL9800MX	1
3		000221	ANCHOR, CABLE, 1518MX-HL9800MX	2
4		000219	HUB, MOTOR, 4453MX-HL9800MX	1
5		000224	PLUG, DESICCANT, ASSY	1
6		006335	O-RING, BUNA N, #020, 50A	1
7		000500	GLAND, CABLE, NIBR, M16, 1P68	1
8		000280	BOLT, HX, 10-32 X 25/32, CAD	2
9		000525	SCREW, SET, CUP, 10-32 X 1/4, SS	2
10		000063	SCREW, SC, M4 X 0.7 X 14, SS	1
11		000920	SCREW, SC, 6-32 X 1/4, SS	4
12		000408	SCREW, SC, 6-32 X 3/8, SS	2
13		001848	WASHER, LOCK, SPLIT, #10, SS	2
14		001169	WASHER, FLAT, 0.17 X 0.472 X 0.039, SS	1

Bambi MAX Valve 25" Actuator 2

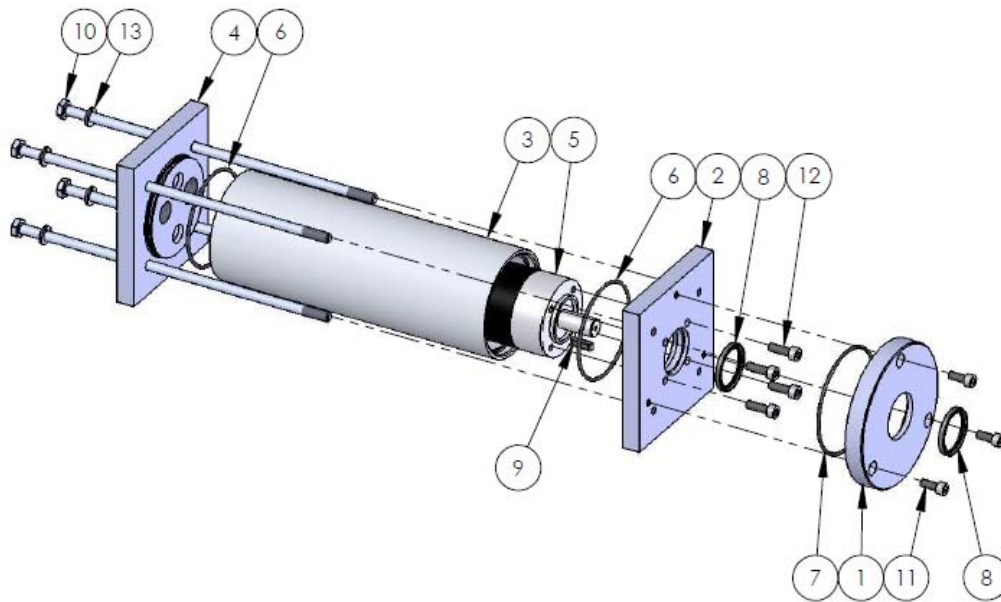


ITEM	MODEL	PART NUMBER	DESCRIPTION	QTY
1		000217	COVER, SEAL, 1518MX-HL9800MX	1
2		000216	PLATE, MOTOR, FRONT, 4453MX-HL9800MX	1
3		000213	TUBE, MOTOR, 4453MX-HL9800MX	1
4		000212	PLATE, MOTOR, REAR, 4453MX-HL9800MX	1
5		007776	MOTOR, GEAR, 24VDC, 3.8A, 58RPM	1
6	BBX4453	005843	O-RING, BUNA N, #037, 65A	2
7	-	005994	O-RING, BUNA N, #039, 65A	1
8	BBX7590	002928	SEAL, LIP, 1 X 1 1/4 X 1/8	2
9		004016	KEY, MACHINE, C1045, SQ, 4MM X 16MM	1
10		000766	BOLT, HX, 1/4-20 X 9, SS	4
11		000379	SCREW, SC, 10-24 X 1/2 SS	3
12		000095	SCREW, SC, M5 X 0.8 X 16, SS	4
13		001848	WASHER, LOCK, SPLIT, #10, SS	2
14		001852	WASHER, LOCK, SPLIT, 1/4, SS	4

Bambi MAX Valve 25" Sheave Bar and Guide Rods

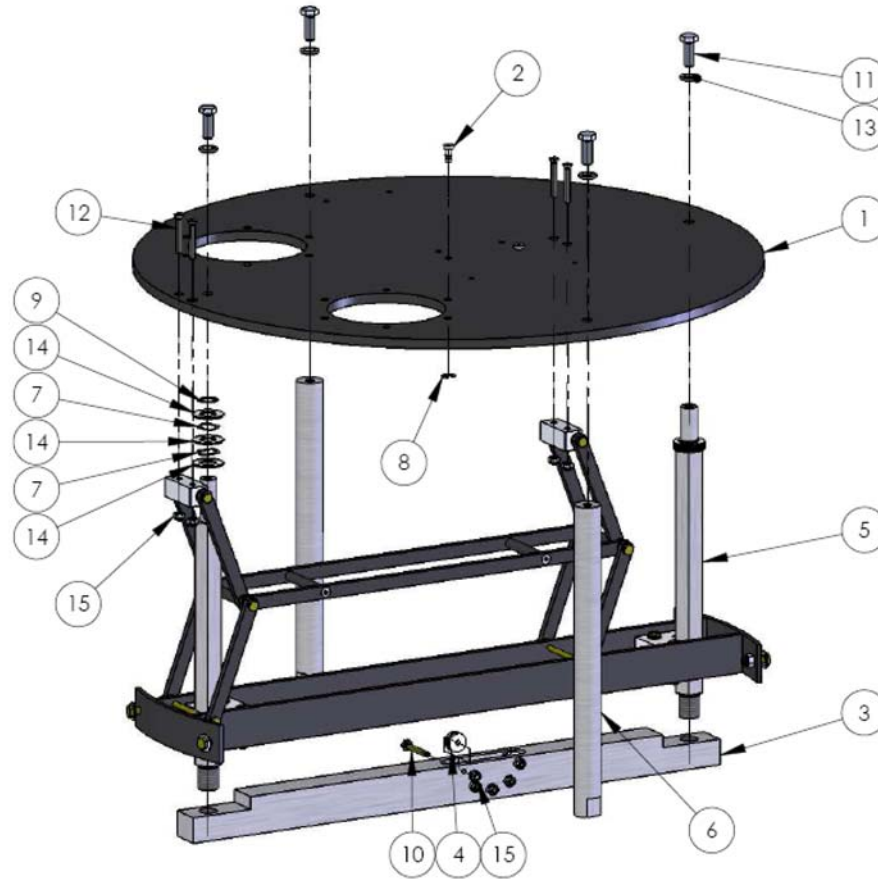


ITEM	MODEL	PART NUMBER	DESCRIPTION	QTY
1	BBX4453 - BBX7590	007136	PLATE, TOP, 25", 4453MX-7590MX	1
2		001618	BUSHING, CABLE	2
3		000227	BAR, SHEAVE, 25", 4453MX-7590MX	1
4		001617	SHEAVE, CABLE	5
5		000232	ROD, GUIDE, 4453MX-HL9800MX	2
6		000230	ROD, SUPPORT, 4453MX-HL9800MX	2
7		007107	SPRING, DISC, 0.650 x 0.855 x 0.060, SS	4
8		005988	RING, RETAINER, EXT, 1/4" PLT	2
9		005214	RING, RETAINER, EXT, 5/8, SS	2
10		000012	BOLT, HX, 10-32 x 1-1732, CAD	5
11		000391	BOLT, HX, 3/8-16 x 1", SS	4
12		002241	SCREW, FSC, 10-32 x 1-1/2", SS	4
13		001853	WASHER, LOCK, SPLIT, 3/8, SS	4
14		006276	WASHER, FLAT, 0.64 x 1.19 x 0.060, SS	6
15		001685	NUT, HX, NYLOCK, 10-32, SS	9

Bambi MAX Valve 25" Lift Bar and Linkage

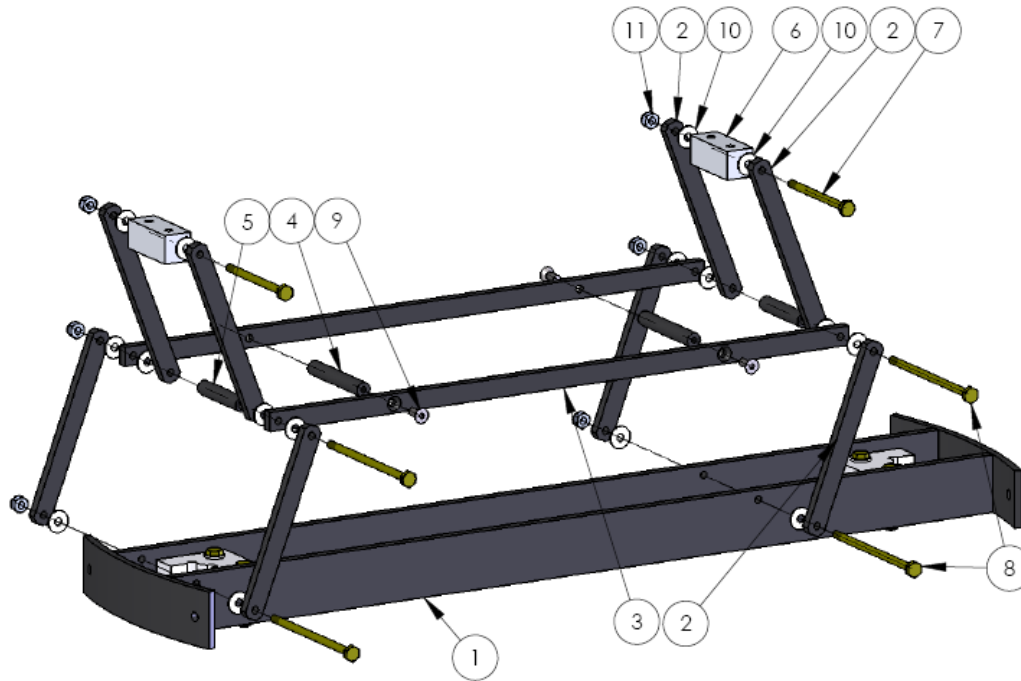


ITEM	MODEL	PART NUMBER	DESCRIPTION	QTY
1		000234	BAR, LIFT, 25", 4453MX-7590MX	1
2		008661	ARM, LINKAGE, LONG, 4453MX-HL9800MX	8
3		008663	ARM, CARRIER, LONG, 4453MX-HL9800MX	2
4	BBX4453	008664	SPACER, SOLID, CARRIER	2
5		008874	SPACER, TUBE, CARRIER	2
6	BBX7590	008665	BLOCK, PIVOT	2
7		001755	BOLT, HX, 10-32 x 2-25/32, CAD	2
8		001771	BOLT, HX, 10-32 x 3-29/32, CAD	4
9		000449	SCREW, FSC, 10-24 x 1/2", SS	4
10		002269	WASHER, FLAT, 0.20 x 0.57 x 0.40, PTFE	16
11		001685	NUT, HX, 10-32, SS	6

Bambi MAX Valve 25" Lift Bar

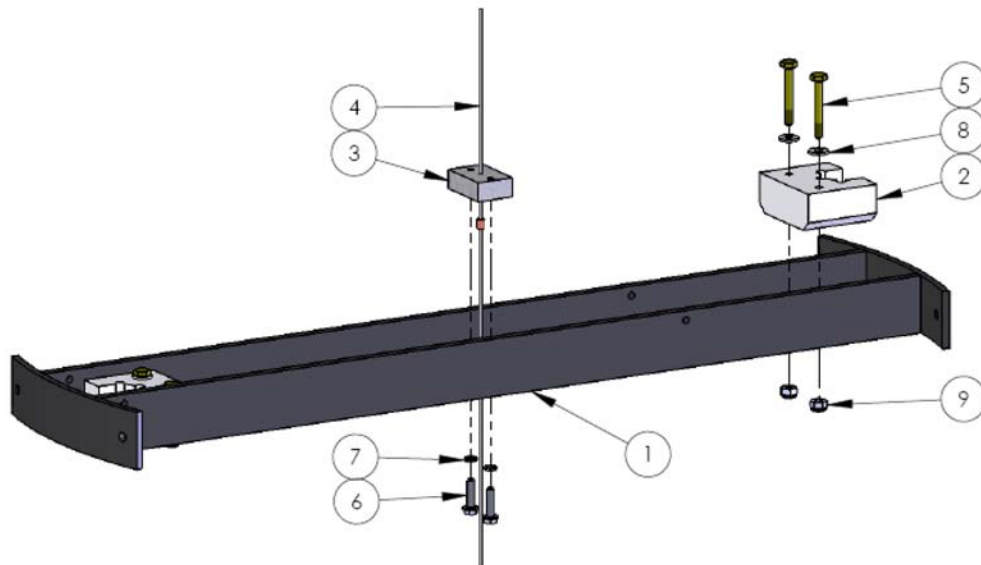


ITEM	MODEL	PART NUMBER	DESCRIPTION	QTY
1	BBX4453 - BBX7590	000234	BAR, LIFT, 25", 4453MX-7590MX	1
2		000236	BUSHING, GUIDE, 16"	2
3		001619	RETAINER, CABLE	1
4		001615	CABLE, DRIVE, ASSEMBLY	1
5		000012	BOLT, HX, 10-32 x 1-17/32", CAD	4
6		001606	SCREW, 10-24 X 3/4", HXSL, SS	2
7		001848	WASHER, LOCK, SPLIT, #10, SS	2
8		001843	WASHER, FLAT, 0.20 x 0.50 x 0.6, SS	4
9		001685	NUT, HX, NYLOCK, 10-32, SS	4

Bambi MAX Head, Model 4453

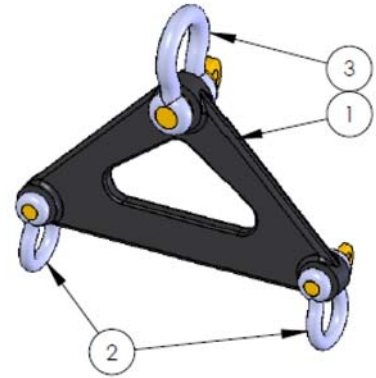


ITEM	PART NUMBER	DESCRIPTION	QTY
1	007272	HEAD, SMALL, 1518MX-4453MX	1
2	001794	SHACKLE, ANCHOR, SCREW, 3/8, GLV	2
3	001795	SHACKLE, ANCHOR, SCREW, 1/2, GLV	1

Bambi MAX Head, Models 5566-7590

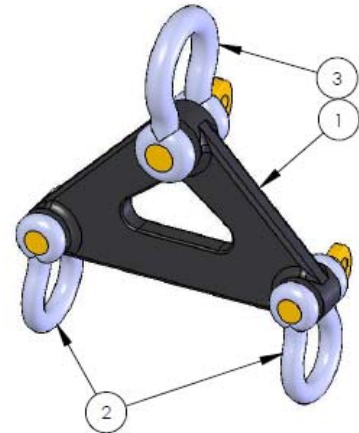


ITEM	PART NUMBER	DESCRIPTION	QTY
1	007273	HEAD, MEDIUM, 5566MX-7590MX	1
2	001796	SHACKLE, ANCHOR, SCREW, 5/8, GLV	2
3	001790	SHACKLE, ANCHOR, SCREW, 3/4, GLV	1

Bucket Shell, Models 4453

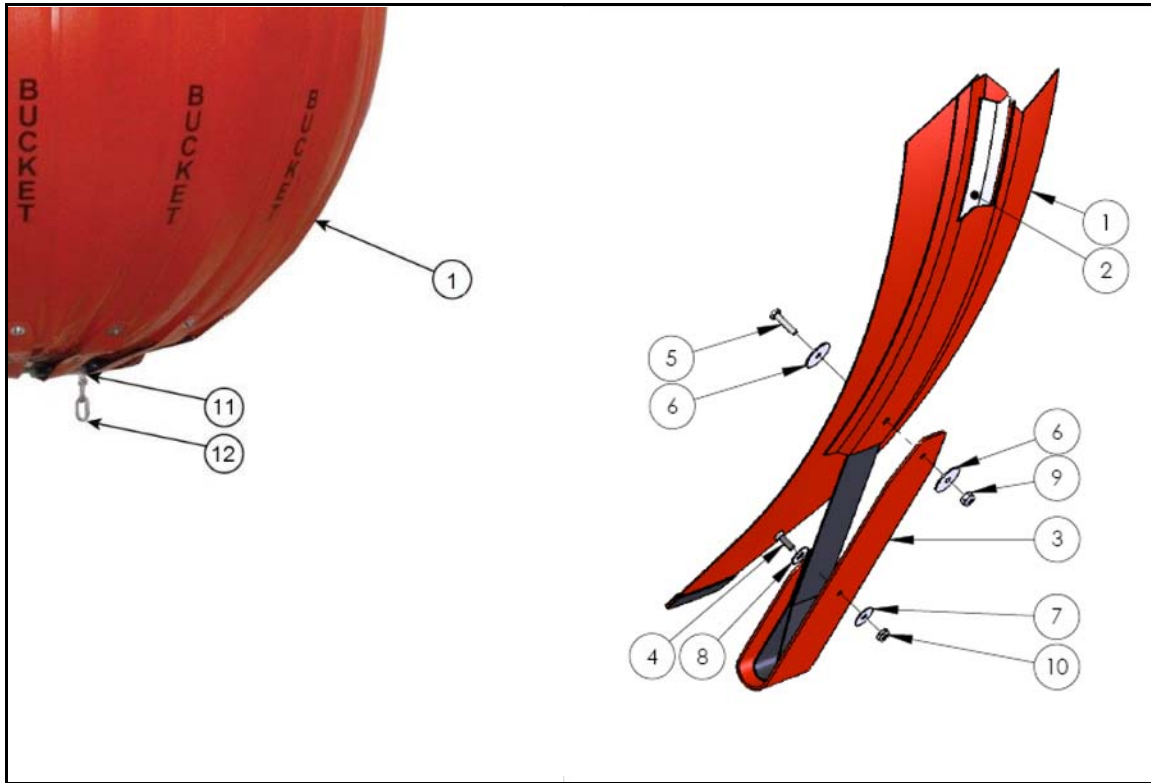


ITEM	MODEL	PART NUMBER	DESCRIPTION	QTY
1	BBX4453	005664	SHELL, BAMBI, MAX, 4453	1
2		005428	BATTEN, ASSY, 51"	16
3			STRIP, WEAR 56 OZ. DBL	16
4		000496	SCREW, 10-24 X 7/8", PNP, SS	16
5		000450	SCREW, 10-24 X 5/8", FHP, SS	16
6		001833	WASHER, FLAT, #10 X 11/16", SS	16
7		001856	WASHER, FLAT, #10 X 1", SS	28
8		001855	WASHER, FLAT, #10 X 3/4", SS	16
9		001661	NUT, HX, JAM, NYLOCK, JAM, 10-24, SS	16
10		001660	NUT, HX, NYLOCK, 10-24, SS	16
11		001788	SHACKLE, ANCHOR, SCREW, 1/4", GLV	1
12		003846	CHAIN, GALV, GR30, 3/16"	76"

Bucket Shell, Models 5566

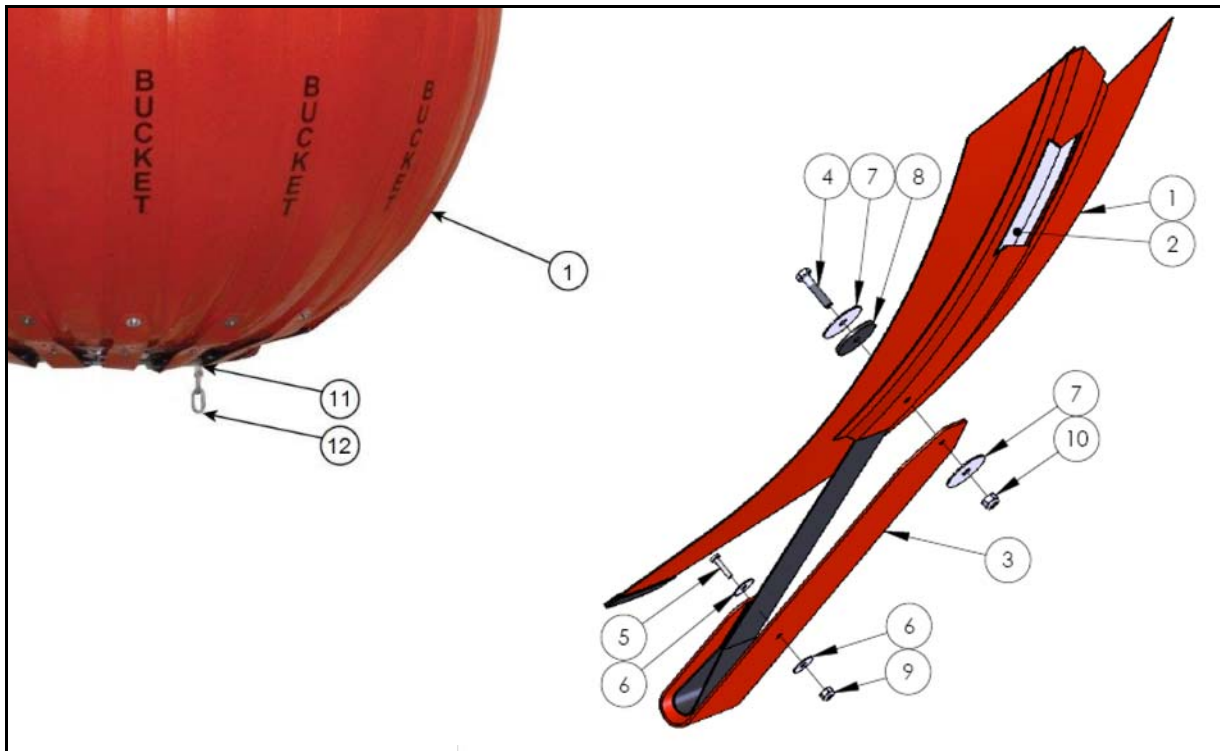

ITEM	MODEL	PART NUMBER	DESCRIPTION	QTY
1	BBX5566	005664	SHELL, BAMBI, MAX, 5566	1
2		005430	BATTEN, ASSY, 54"	16
3			STRIP, WEAR 56 OZ. DBL	16
4		000496	SCREW, 10-24 X 7/8", PNPB, SS	16
5		000371	BOLT, HX, 1/4-20 x 1-1/4", SS	16
6		001855	WASHER, FLAT, #10 X 3/4", SS	32
7		001857	WASHER, FLAT, 1/4X 1-1/2, SS	28
8		001828	WASHER, 7/32 x 1-1/2 x 1/8", NEO	16
9		001660	NUT, HX, NYLOCK, 10-24, SS	16
10		001662	NUT, HX, NYLOCK, 1/4-20, SS	16
11		001788	SHACKLE, ANCHOR, SCREW, 1/4", GLV	1
12		003846	CHAIN, GALV, GR30, 3/16"	76"

Bucket Shell, Models 6578-7590

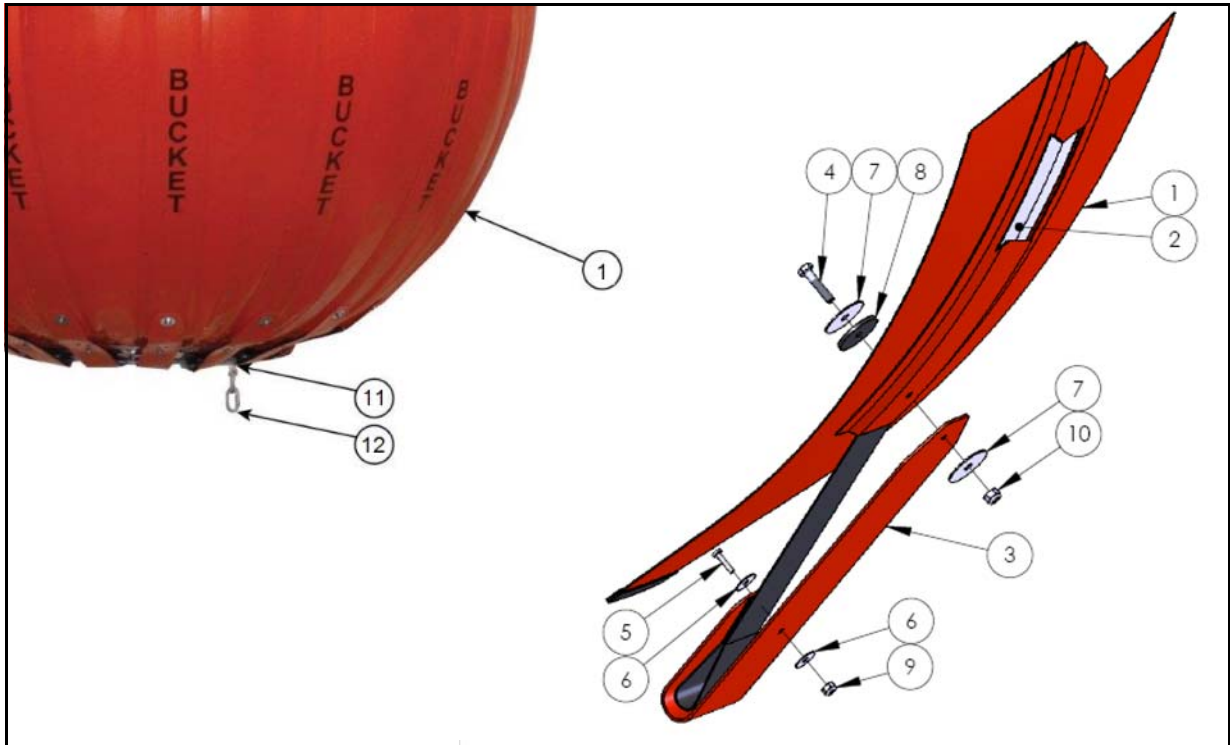

ITEM	MODEL	PART NUMBER	DESCRIPTION	QTY
1	BBX6578	005670	SHELL, BAMBI, MAX	1
	BBX7590	007748		
2	BBX6578	005433	BATTEN, ASSY, 57"	20
	BBX7590	005436	BATTEN, ASSY, 62-1/2"	
3	BBX6578		STRIP, WEAR, 56 OZ. L	20
	BBX7590			
4	ALL	000371	BOLT, HX, 1/4-20 X 1-1/4, SS	20
5		000495	SCREW, 10-24 X 3/4, PNPB, SS	20
6		001855	WASHER, FLAT, 3/16 X 3/4, SS	40
7		001857	WASHER, FLAT, 1/4 X 1-1/2, SS	40
8		001828	WASHER, 7/32 x 1-1/2 x 1/8", NEO	20
9		001660	NUT, HX, NYLOCK, 10-24, SS	20
10		001662	NUT, HX, NYLOCK, 1/4-20, SS	20
11		001789	SHACKLE, ANCHOR, 5/16, SCREW, GLV	1
12		003846	CHAIN, 3/16, GR30, GLV	80"


Rigging, Models 4453 and 5566



Note: #9 not available on Bambi MAX model 4453.



ITEM	MODEL	PART NUMBER	DESCRIPTION	QTY
1	BBX4453	005471	M-STRAP, LOOP, 22-1/4"	6
	BBX5566	005473	M-STRAP, LOOP, 22-5/8"	6
2	BBX4453	005472	M-STRAP, STRAIGHT, 46-1/2"	5
	BBX5566	005474	M-STRAP, STRAIGHT, 50-1/2"	5
3	BBX4453	005549	CABLE, SUSPENSION, PAIR	4
	BBX5566	009857		
4	ALL	005526	CHAIN, TOP, 18-1/2"	2
5		005527	CHAIN, TOP, 20-1/2"	6
6		001789	SHACKLE, ANCHOR, 5/16", SCREW GALV	5
7		004057	LINK, CONNECTING, 9/32", PLT	8
8	BBX5566	006710	LINK, CONNECTING, 3/8" PLT	4
9		005483	PROTECTOR, M-STRAP	8
10		000371	BOLT, HX, 1/4-20 X 1-1/4", SS	8
11		001857	WASHER, FLAT, 1/4 X 1-1/2", SS	16
12		001662	NUT, HX, NYLOCK, 1/4-20, SS	8

Rigging, Models 6578 - 7590

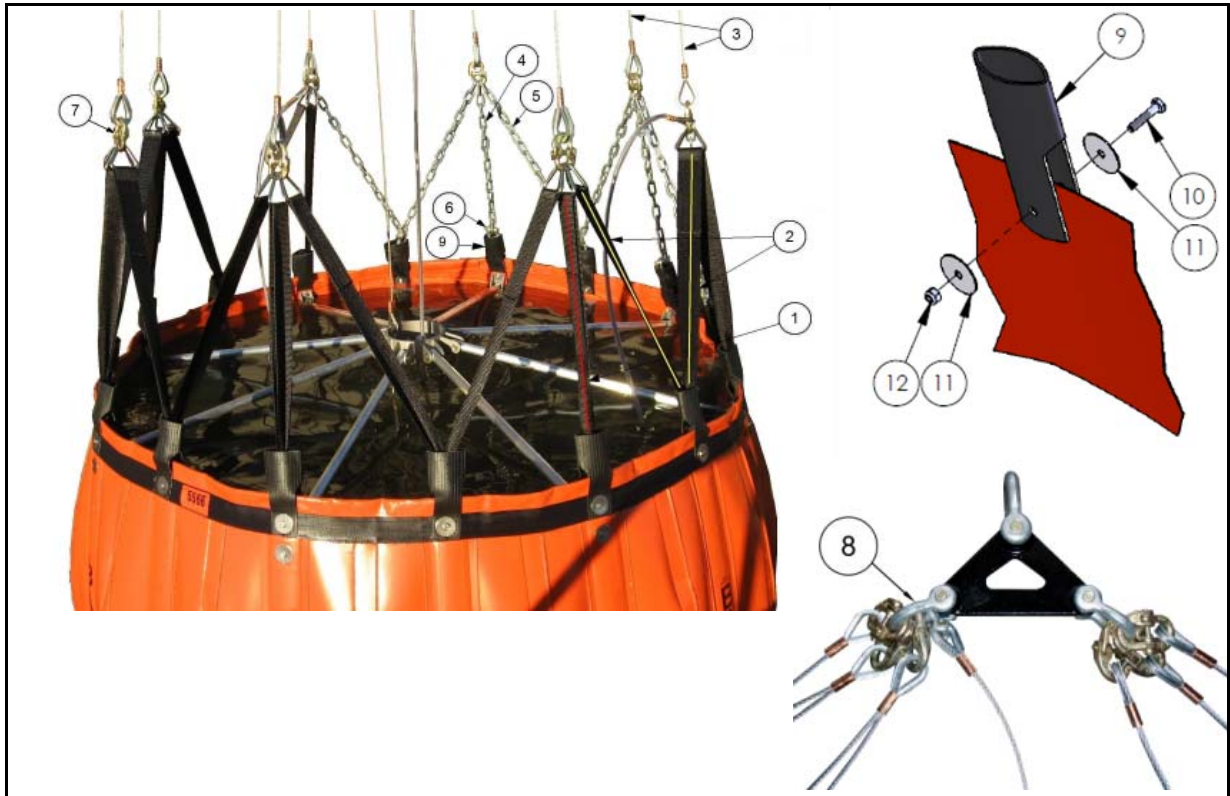

ITEM	MODEL	PART NUMBER	DESCRIPTION	QTY
1	BBX6578	005475	M-STRAP, LOOP, 23-3/8"	6
	BBX7590			
2	BBX6578	005476	M-STRAP, STRAIGHT, 51"	6
	BBX7590			
3	BBX6578	009858	CABLE, SUSPENSION, LINE, PAIR	4
	BBX7590	009859		
	BBX6578	009862	CABLE, SUSPENSION, LINE, SINGLE	2
	BBX7590	009863		
4	BBX6578	005528	CHAIN, TOP, 19-1/2"	2
	BBX7590			
5	BBX6578	005529	CHAIN, TOP, 20-3/4"	6
	BBX7590			
6	ALL	001789	SHACKLE, ANCHOR, 5/16", SCREW, GLV	5
7		004057	LINK, CONNECTOR, 9/32", PLT	10
8		006710	LINK, CONNECTING, 3/8", PLT	6
9		005483	M-STRAP PROTECTOR	10
10		000371	BOLT, HX, 1/4-20 X 1-1/4", SS	10
11		001857	WASHER, FLAT, 1/4 X 1-1/2", FND, SS	20
12		001662	NUT, HX, NYLOCK, 1/4-20, SS	10


IDS System, Model 4453

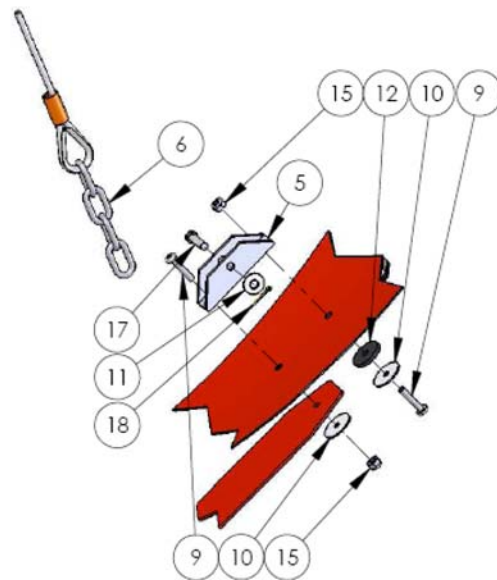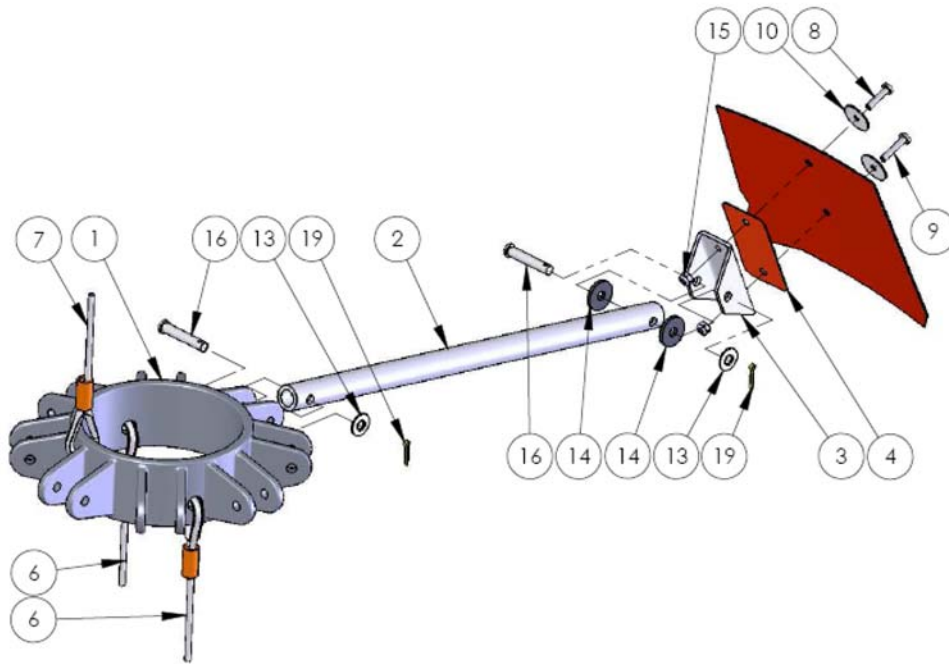

IDS System, Model 4453 (continued)

ITEM	MODEL	PART NUMBER	DESCRIPTION	QTY
1	BBX4453	005372	HUB,8 SPOKE,A356.2 T2 T6, CAST	1
2		007211	SPOKE, SOLID, 24 5/8"	8
3		005386	BRACKET SHELL	8
4		005389	PATCH,WEAR,BRACKET	8
5		005307	BRACKET, RESTRAINER	2
6		005300	CABLE, RESTRAINER,HUB	2
7		005317	CABLE,IDS,DEPLOYMENT	1
8		000496	SCREW, 10-24X7/8,PNPH,SS	8
9		000497	SCREW, 10-24X1,PNPH,SS	12
10		001856	WASHER,FLAT,10X1,FND,SS	20
11		001833	WASHER,FLAT,1/4X11/16,SS	2
12		001824	WASHER,3/16X1,1/8,NEO	2
13		000068	WASHER,FLAT,5/16X3/4,SS	16
14		001826	WASHER,FLAT,5/16X1,1/8NEO	16
15		001660	NUT,HX, NYLOCK,10-24,SS	20
16		001697	PIN,CLEVIS,5/16 X 1-3/4,SS	16
17		001703	PIN,CLEVIS,1/4 X 1-1/8,SS	2
18		001710	PIN,COTTER,1/16 X 3/4,PLT	2
19		001713	PIN,COTTER,3/32 X3/4,PLT	16



IDS System, Model 5566

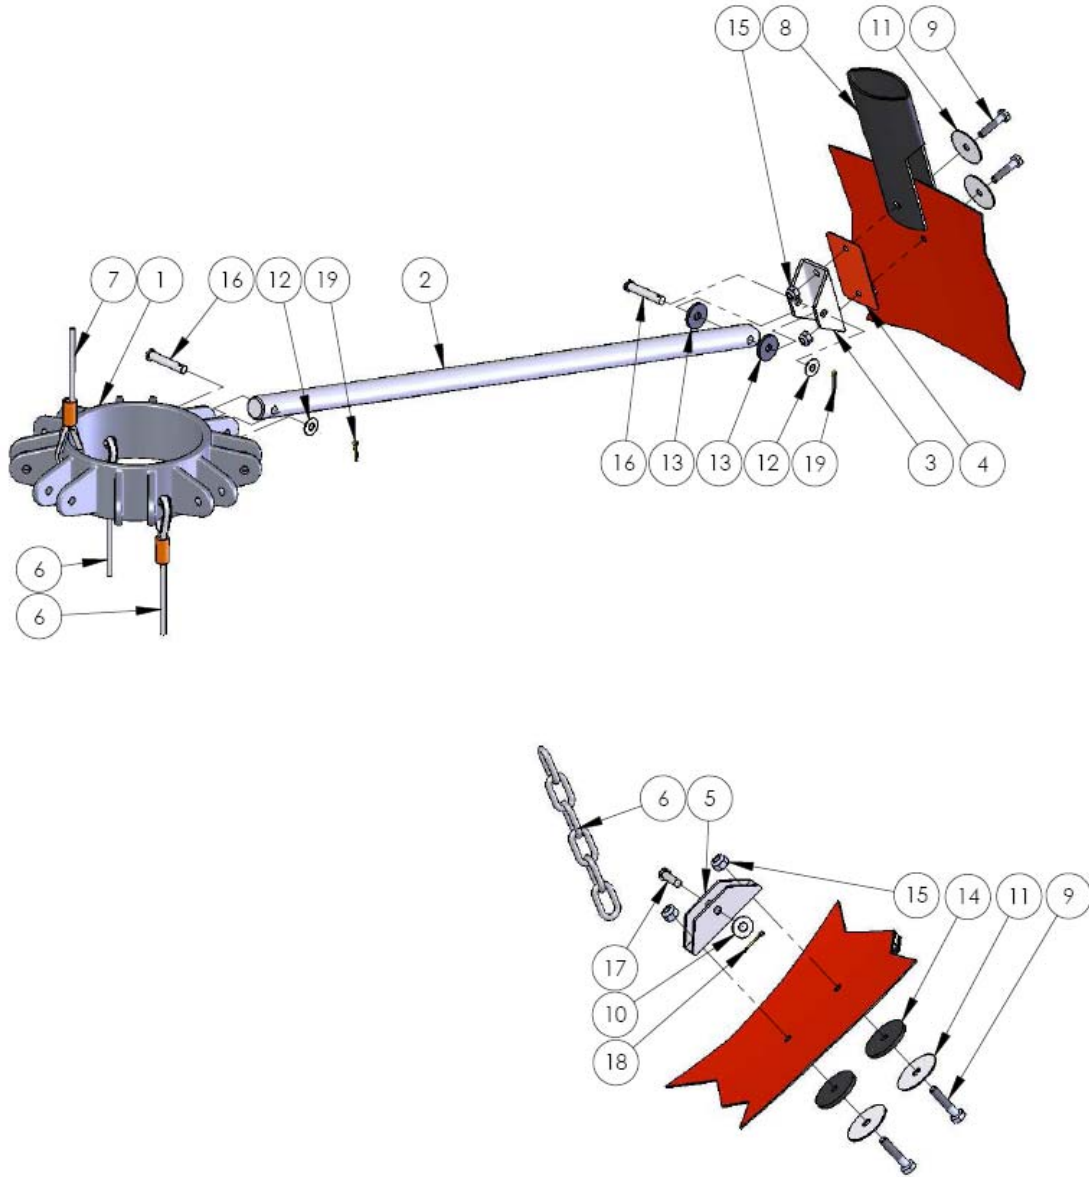

IDS System, Model 5566 (continued)

ITEM	MODEL	PART NUMBER	DESCRIPTION	QTY
1	BBX5566	005372	HUB, 8 SPOKE CAST	1
2		005348	SPOKE, SOLID, 27-1/8"	8
3		005386	BRACKET, SHELL	8
4		005389	PATCH, WEAR, BRACKET	10
5		005307	BRACKET, RESTRAINER	2
6		005301	CABLE, RESTRAINER, HUB	2
7		005317	CABLE, IDS, DEPLOYMENT	1
8		005483	PROTECTOR, M-STRAP	8
9		000371	BOLT, HX, 1/4-20 X 1-1/4, SS	20
10		001833	WASHER, FLAT, 1/4 X 11/16, SS	2
11		001857	WASHER, FLAT, 1/4 X 1-1/2, SS	20
12		000068	WASHER, FLAT, 5/16 X 3/4, SS	16
13		001826	WASHER, FLAT, 5/16 X 1 X 1/8 NEO	16
14		001828	WASHER, FLAT, 1/4 X 1-1/2 X 1/8 NEO	4
15		001662	NUT, HX, NYLOCK, 1/4-20, SS	20
16		001697	PIN, CLEVIS, 5/16 X 1-3/4, SS	16
17		001703	CLEVIS PIN, 1/4 X 1-1/8, SS	2
18		001710	PIN, COTTER, 1/16 X 3/4, PLT	2
19		001713	PIN, COTTER, 3/32 X 3/4, PLT	16


IDS System, Models 6578 - 7590

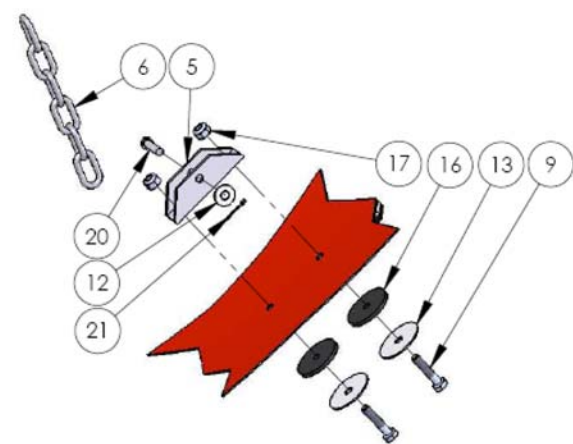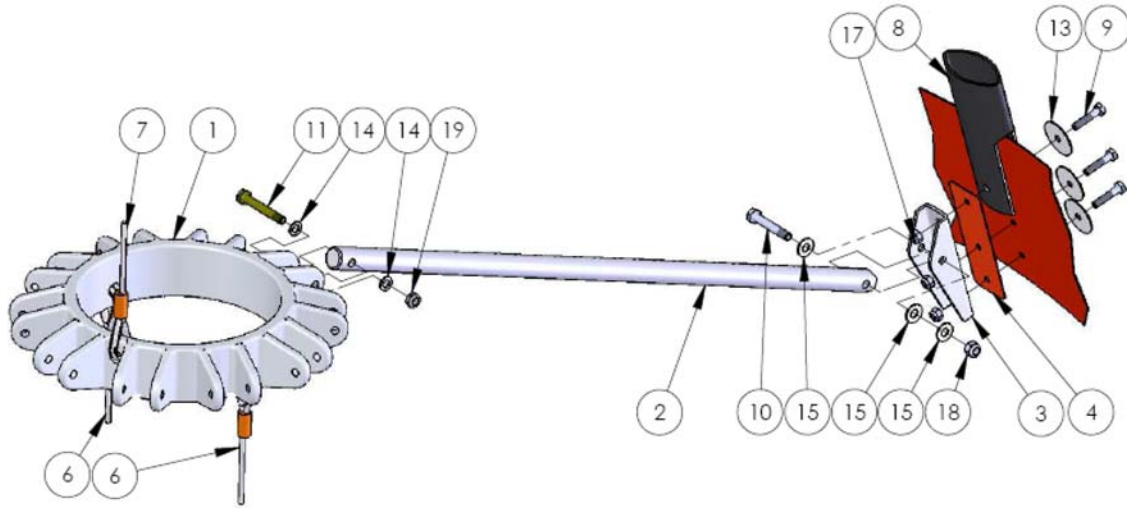

IDS System, Models 6578 - 7590 (continued)

ITEM	MODEL	PART NUMBER	DESCRIPTION	QTY
1	ALL	005380	HUB, 10 SPOKE	1
2	BBX6578	005350	SPOKE, SOLID, 28"	10
	BBX7590	005351	SPOKE, SOLID, 27-3/8"	
3	ALL	005387	BRACKET, SHELL	10
4		005390	PATCH, WEAR, BRACKET	10
5		005307	BRACKET, RESTRAINER	2
6	BBX6578	005302	CABLE, RESTRAINER, HUB	2
	BBX7590			
7	BBX6578	005320	CABLE , IDS, DEPLOYMENT	1
	BBX7590	005321		
8	ALL	005483	PROTECTOR, M-STRAP	10
9		000371	BOLT, 1/4-20 X 1-1/4, HX, SS	34
10		000390	BOLT, 5/16-18 X 2, HX, SS	10
11		000314	BOLT, 5/16-24 X 2 1/4, HX, CAD	10
12		001833	WASHER, FLAT, 1/4 X 11/16, THIN, SS	2
13		001857	WASHER, FLAT, 1/4 X 1-1/2, FND, SS	34
14		001840	WASHER, FLAT, 5/16 X 9/16, AN, SS	20
15		000068	WASHER, FLAT, 5/16 X 3/4, SS	30
16		001828	WASHER, FLAT, 1/4 X 1-1/2 X 1/8, NEO	4
17		001662	NUT, HX, NYLOCK , 1/4-20, HX, SS	34
18		001644	NUT, HX, NYLOCK, 5/16-18, HX, PLT	10
19		001637	NUT, HX, NYLOCK JAM, 5/16-24, SS	10
20		001703	PIN, CLEVIS, 1/4 X 1-1/8, SS	2
21		001710	PIN, COTTER, 1/16 X 3/4" PLT	2

Ballast Systems, Models 4453 - 7590

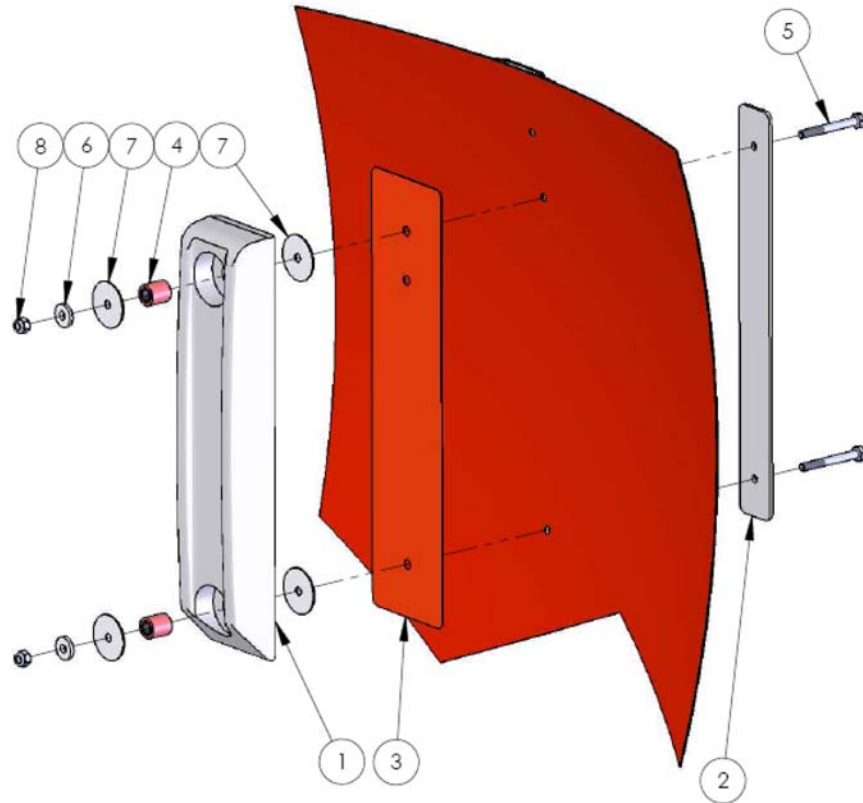

ITEM	MODEL	PART NUMBER	DESCRIPTION	QTY
1	ALL	005455	BALLAST BAR, 16 LB, GALV	3
2		005499	BACKING PLATE, LG, SS	3
3		005494	PATCH, WEAR, BALLAST	3
4		007111	SPACER, BALLAST BAR	6
5		000380	BOLT, HX, 1/4-20 X 2-1/4, SS	6
6		001834	WASHER, FLAT, 1/4 X 3/4 X 1/8, SS	6
7		001857	WASHER, FLAT, 1/4 X 1-1/2, SS	12
8		001662	NUT, HX, NYLOCK , 1/4-20, SS	6

Carry Bags

PART NUMBER	DESCRIPTION
005603	CARRY, BAG, BBX4473
005604	CARRY, BAG, BBX5566-BBX6578
005605	CARRY, BAG, BBX7590

Section 10: Warranty

SEI Industries Ltd. (the Company) agrees to grant a warranty for a period of one year from the date of purchase of Bambi MAX systems on the following conditions:

- a) The company's sole obligation under this warranty is limited to repairing or replacing, at the company's sole discretion, any product shown to be defective.
- b) The company's products are not guaranteed for any specific length of time or measure of service, but are warranted only to be free from defects in workmanship and material for a period of one year to the original purchaser.
- c) To the extent allowable under applicable law, the company's liability for consequential and incidental damages is expressly disclaimed. **The company's liability in all events is limited to and shall not exceed, the purchase price paid.**
- d) This warranty is granted to the original purchaser of Bambi MAX systems and does not extend to a subsequent purchaser or assignee.
- e) The company must receive notification in writing of any claims of warranty from the original purchaser which must give details of the claimed defect in the product.
- f) Where the original purchaser is claiming under warranty, the product must be returned to the company for inspection with all transportation and duty charges prepaid.
- g) The warranty does not extend to any product that has been accidentally damaged, abraded, altered, punctured, abused, misused or used for a purpose which has not been approved by the company.
- h) This warranty does not apply to any accessories used with the product that are not supplied by the company and any warranty on such accessories must be requested from the manufacturer or dealer of the accessories.
- i) In the event the original purchaser does not give notice of a warranty claim, within one year of the original purchase of the product, it is understood that the purchaser has waived the claim for warranty and the purchaser and/or any subsequent purchaser must accept the condition of the product, without warranty.
- j) Any technical information supplied by the company regarding the product is not a condition of warranty but rather is information provided by the company to the best of its knowledge.
- k) There are no implied warranties nor is there any warranty that can be assumed from any representation of any person, except the company itself.

Exclusions


- l) This warranty is void if the product is not installed, used and/or maintained in accordance with the operations manual supplied by SEI.
- m) All Bambi MAXs are designed and manufactured with substantial safety margins. It is the responsibility of the user to ensure that the bucket is maintained to a safe standard.

Appendix: Drawings

Pilot Controls

RECOMMENDED COMPONENTS

ITEM	DESCRIPTION	SPECIFICATION
CB1	CIRCUIT BREAKER, 5A	MS22073-5
K1	RELAY, SPST, 10A	MS24149F
S1	SWITCH, SPST, MOMENTARY	MS24523-28
J1	CONNECTOR, PLUG	NEMA 5-15R
J2	CONNECTOR, RECEPTACLE, IP67	NEMA 5-15P
P1	CONNECTOR, PLUG, IP67	NEMA 5-15P, IP67
P2	CONNECTOR, PLUG, IP67	NEMA 5-15P, IP67
—	WIRE, #20 AWG	MS22759/16-20
—	WIRE, #16 AWG	MS22759/16-16

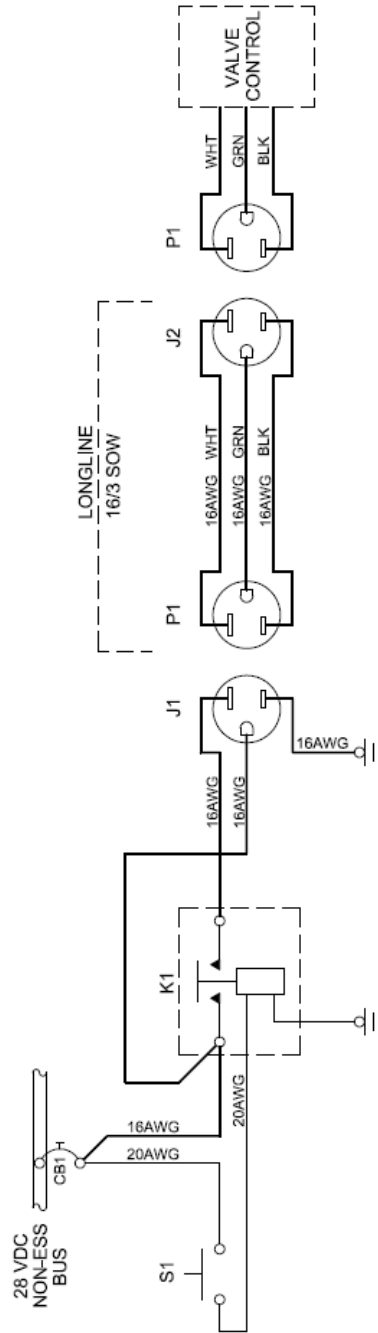


NOTES

1. THESE ARE RECOMMENDED INSTALLATION INSTRUCTIONS ONLY. ALL INSTALLATIONS TO BE DONE BY QUALIFIED PERSONNEL IN ACCORDANCE WITH APPLICABLE LOCAL REGULATIONS.
2. CONNECTION TO AIRCRAFT POWER SUPPLY DONE IN ACCORDANCE WITH FAA ADVISORY CIRCULAR AC43.13-1B AND AC43.12-2A. DO NOT CONNECT THE BAMBİ SYSTEM TO ANY AIRCRAFT BUS BAR THAT IS USED FOR EMERGENCY OR ESSENTIAL LOADS. AMMEND THE AIRCRAFT ELECTRICAL LOAD ANALYSIS TO ENSURE THAT THE GENERATOR CAPACITY IS ADEQUATE TO OPERATE THE SYSTEM.
3. ALL GROUNDS, SOLDERED TERMINALS, AND CRIMPED TERMINALS DONE IN ACCORDANCE WITH AIRCRAFT MANUFACTURER'S INSTRUCTIONS.

Pilot Controls, US Interagency

RECOMMENDED COMPONENTS

ITEM	DESCRIPTION	SPECIFICATION
CB1	CIRCUIT BREAKER, 5A	MS22073-5
CB2	CIRCUIT BREAKER, 50A	MS24571-50
K1	RELAY, SPST, 50A	MS24166-D1
S1	SWITCH, SPST, MOMENTARY	MS24523-28
J1	CONNECTOR, RECEPTACLE	MS3101E-24-11S
P1	CONNECTOR, PLUG	MS3107B-24-11P
J2	CONNECTOR, RECEPTACLE, IP67	NEMA 5-15R, IP67
P2	CONNECTOR, PLUG, IP67	NEMA 5-15P, IP67
—	WIRE, #20 AWG	MS22759/16-20
—	WIRE, #8 AWG	MS22759/16-8

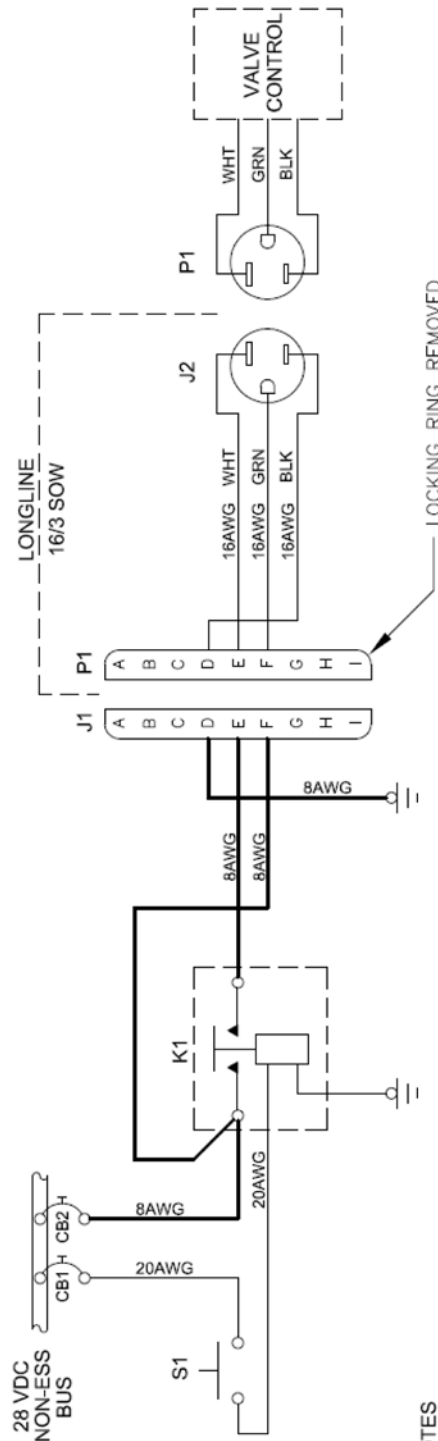

NOTES

1. THESE ARE RECOMMENDED INSTALLATION INSTRUCTIONS ONLY. ALL INSTALLATIONS TO BE DONE BY QUALIFIED PERSONNEL IN ACCORDANCE WITH APPLICABLE LOCAL REGULATIONS.
2. CONNECTION TO AIRCRAFT POWER SUPPLY DONE IN ACCORDANCE WITH FAA ADVISORY CIRCULAR AC43.13-1B AND AC43.12-2A. DO NOT CONNECT THE BAMBİ SYSTEM TO ANY AIRCRAFT BUS BAR THAT IS USED FOR EMERGENCY OR ESSENTIAL LOADS. AMMEND THE AIRCRAFT ELECTRICAL LOAD ANALYSIS TO ENSURE THAT THE GENERATOR CAPACITY IS ADEQUATE TO OPERATE THE SYSTEM.
3. ALL GROUNDS, SOLDERED TERMINALS, AND CRIMPED TERMINALS DONE IN ACCORDANCE WITH AIRCRAFT MANUFACTURER'S INSTRUCTIONS.
4. ACTUATION SWITCH MOUNTED ON THE COLLECTIVE PITCH LEVER. SWITCH MARKED "OPEN" AND SPRING-LOADED TO THE OFF POSITION.

Crew Controls (using remote power supply)

RECOMMENDED COMPONENTS

ITEM	DESCRIPTION	SPECIFICATION
P1	CONNECTOR, PLUG	NEMA 5-15P
J2	CONNECTOR, RECEPTACLE, IP67	NEMA 5-15R, IP67
P2	CONNECTOR, PLUG, IP67	NEMA 5-15P, IP67
—	WIRE, #20 AWG	MS22759/16-20
—	WIRE, #16 AWG	MS22759/16-16

