

Technical Bulletin

Date: February 19, 2015

Product Line: Bambi

Models: Sacksafoam I

Subject: New Sacksafoam Controller

Reference: The new Sacksafoam I manual will be released soon.

http://www.sei-ind.com/sites/default/files/pdf/2008%20Sacksafoam%20II%20Model%205598%20Manual.pdf http://www.sei-ind.com/sites/default/files/pdf/2008%20Sacksafoam%20III%20Operations%20Manual.pdf

Details

SEI is introducing a new Sacksafoam
Controller (SFC). This SFC will
supersede the original controller for
customers with bladder style
Sacksafoam I systems. Currently, the
new SFC is not directly compatible with
Sacksafoam II or Sacksafoam III
systems. SEI will continue to provide

the original controller to service Sacksafoam II's and Sacksafoam III's while stock exists.



Figure 1 - SFC with DZUS mounts and Adapter

The SFC is operated with a glove compatible touch screen. The SFC includes an adapter that connects to the existing Sacksafoam wiring harness and includes a D-sub connector that can be used to connect with a remote injection switch. See Figure 2 for details.



DZUS rail adapters are available for the SFC. Please note that the product dimensions have changed and the new SFC will not fit in the same location on a DZUS rail system as the original Sacksafoam controller.

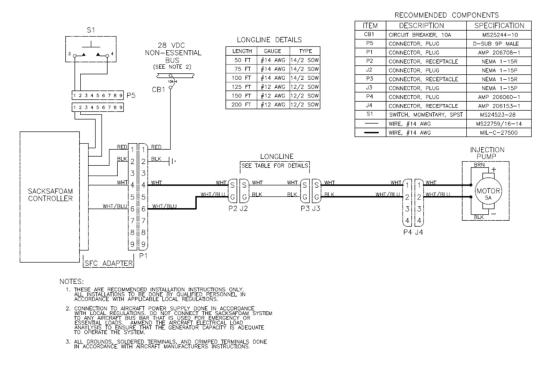


Figure 2- Recommended wiring

This Technical Bulletin is available on the SEI website. http://www.sei-ind.com/resources/manuals

For further details, please contact the following SEI representatives.

Contact

Shawn Bethel
Division Manager, Firefighting Division
604-946-3131 ext. 119
shawn@sei-ind.com

Robert Button
Product Engineer, Firefighting Division
604-946-3131 ext. 423
robert@sei-ind.com

